


**Partner: Bose**  
**Model: ESP-88**  
**Device Type: 3 Band PEQ Gain Only Interface v1.0**



### GENERAL INFORMATION

|                                    |   |
|------------------------------------|---|
| <b>SIMPLWINDOWS NAME:</b>          | Bose ESP 3 Band PEQ Gain Only Interface v1.0  |
| <b>CATEGORY:</b>                   | Multi-Zone  |
| <b>VERSION:</b>                    | 1.0   |
| <b>SUMMARY:</b>                    | This module controls a PEQ-3band object within the Bose ESP-88 configuration.   |
| <b>GENERAL NOTES:</b>              | This module controls a PEQ-3band object within the Bose ESP-88 system. Please note that in the Bose configuration the PEQ-3band name needs to be prefaced with an “#” (such as #PEQ). This enables the Bose unit to send unsolicited real-time feedback to the Crestron unit when any changes are made. |
| <b>CRESTRON HARDWARE REQUIRED:</b> | X-Series Processor, CNX-COM2, ST-COM, 2-Series Processor, C2COM3  |
| <b>SETUP OF CRESTRON HARDWARE:</b> | RS232<br>Baud: 38400<br>Parity: N<br>Data Bits: 8<br>Stop Bits: 1   |
| <b>VENDOR FIRMWARE:</b>            | None  |
| <b>VENDOR SETUP:</b>               | None  |
| <b>CABLE DIAGRAM:</b>              | CNSP-532  |

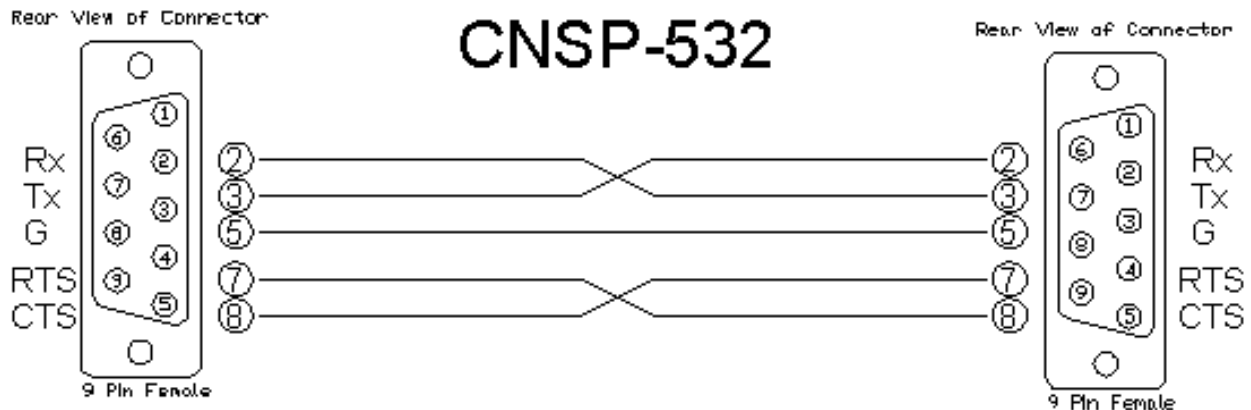

**Partner: Bose**  
**Model: ESP-88**  
**Device Type: 3 Band PEQ Gain Only Interface v1.0**


**CONTROL:**

|                              |   |   |
|------------------------------|---|---|
| PEQ_Band*_Level_In           | A | Use to set the parametric eq band level. Signed. Range from -32768 to +32767. Connect to slider definition. |
| PEQ_Band*_Level_Up/Down      | D | Press to increase or decrease the parametric eq band level.   |
| PEQ_Band*_Mute_On/Off/Toggle | D | Pulse to turn the parametric eq band mute on or off.  |
| PEQ_Band_Enable              | D | Latch high to enable serial communications with unit.   |
| PEQ_Band_Read                | D | Pulse to poll for current PEQ status.   |
| From_Device                  | S | Serial signal to be routed from an RS-232C port   |

**FEEDBACK:**

|                          |   |  |
|--------------------------|---|--|
| PEQ_Band*_Level_Out      | A | Indicates the current parametric eq band level. Range from -32768 to +32767. Connect to slider definition. |
| PEQ_Band*_Level_Out_Text | S | Text field indicating the parametric eq band level. Range is from -60.0 to 12.0db.                         |
| PEQ_Band*_Mute_Is_On/Off | D | Indicates the current parametric eq band mute status.  |
| To_Device                | S | Serial signal to be routed to an RS-232C port  |

**PARAMETER:**

|             |   |   |
|-------------|---|---|
| Step        | A | Use to set the volume up/down step increment.   |
| Module Name | D | The name of the PEQ module in the Bose ESP-88 configuration that this module will be communicating with. Note: The module name in the Bose configuration needs an “#” prefix, while the name entered in this module does not. |

**Partner: Bose**  
**Model: ESP-88**  
**Device Type: 3 Band PEQ Gain Only Interface v1.0**

**TESTING:**

|   |                        |
|---|------------------------|
| <b>OPS USED FOR TESTING:</b>            | v3.155.1240            |
| <b>SIMPL WINDOWS USED FOR TESTING:</b>  | v2.10.32               |
| <b>DEVICE DB USED FOR TESTING:</b>      | 20.03.013.00           |
| <b>CRES DB USED FOR TESTING:</b>        | 20.01.008.00           |
| <b>SYMBOL LIBRARY USED FOR TESTING:</b> | 576                    |
| <b>SAMPLE PROGRAM:</b>                  | Bose ESP-88 Demo PRO2  |
| <b>REVISION HISTORY:</b>                | v1.0 – Initial Release |