SIMPLWINDOWS

NAME:

CSI HVAC Analog Point Polling

CATEGORY: **VERSION:**

HVAC 1.0

SUMMARY:

Allows an analog point (such as room temperature) to

be monitored

GENERAL NOTES:

This module is designed to work with CSI analog data points. A data point is defined for every sensor/actuator on the CSI system. A data point is specified by the following values:

Link - a number from 0-15 LAN Tap - a number from 0-63 DCU - a number from 0-63 Point - a number from 0-31 Offset - a number from 0-9 Point types as follows:

DI = 1DA = 2DM = 3DC = 4DO = 5AI = 6AO = 7GI = 8GO = 9PI = 10

This module works in conjunction with the CSITXRXA module to provide polling of a single CSI analog data point (AI or AO). A separate copy of this module should be used for each analog point desired to monitor. No matter how many copies of this module are used, they will all connect to a single copy of the CSITXRXA module. The module will commonly be used to monitor the current temperature in a room, or the outside temperature.

There is a POLL-IN and a POLL-OUT signal on this module. The POLL-OUT should be connected to the POLL-IN on the next CSI module. All modules should have their polling signals looped through each other. The last module in the list can be looped back to the first. It will take 1 second for this module to complete it's polling. These signals will allow each point being controlled or monitored to be polled one at a time.

CRESTRON HARDWARE REQUIRED:

ST-COM, **CNXCOM**

HARDWARE:

SETUP OF CRESTRON Tested at Crestron with the following settings:

Baud Rate - 9600 Parity - None Data Bits - 8 Stop Bits - 1

VENDOR FIRMWARE: PGM 7798 REV 1.00

VENDOR SETUP:

A CSI tap is required to provide the RS232 connection to the Crestron system. Check with CSI to verify that the tap has an asynchronous RS232 port. Also, obtain the cable from CSI which is used to connect the tap to a

PC.

Dip switches on the tap should be set to match the baud rate of the Crestron system (9600)

The unit tested at Crestron was a CSI model 7798

CONTROL:

Specifies the link on which the desired point is LINK

located (0-15)

Specifies the LAN tap on which the desired LAN-TAP Р

point is located (0-63)

Specifies the DCU on which the desired point DCU

is located (0-63)

POINT Specifies the point (0-31)

D

OFFSET Specifies the offset of the point (0-9)

POINT-TYPE Specifies the point type (1-10)

This signal causes the module to poll the CSI

system for the state of the selected point.

This should be looped through all CSI

modules in the system

FEEDBACK:

POLL-IN

Goes high when the module is finished polling **POLL-OUT** (1 second after it starts). This should be D

looped through all CSI modules in the system

Analog value showing the current value of the **TEMPERATURE-AN** Α

selected point. Should be sent to a digital

panel meter on the touchpanel

This signal will be high if the the returned TEMPERATURE-NEG? D

temperature is negative

Signal to be routed to the corresponding input TXRX-READ

on the CSITXRXA module

Signal to be routed to the corresponding input **TXRX-STORE** D

on the CSITXRXA module

Signal to be routed to the corresponding input TXRX-VALUE-OUT Α on the CSITXRXA module

Signal to be routed to the corresponding input

TXRX-VALUE-IN on the CSITXRXA module

Signal to be routed to the corresponding input

TXRX-LINK on the CSITXRXA module

Signal to be routed to the corresponding input TXRX-LAN-TAP on the CSITXRXA module

Signal to be routed to the corresponding input TXRX-DCU Α

on the CSITXRXA module

Signal to be routed to the corresponding input **TXRX-POINT**

on the CSITXRXA module

Signal to be routed to the corresponding input TXRX-OFFSET Α

on the CSITXRXA module

Signal to be routed to the corresponding input TXRX-POINT-TYPE Α

on the CSITXRXA module

Signal to be routed to the corresponding input **TXRX-NEG-OUT** D

on the CSITXRXA module

Signal to be routed to the corresponding input TXRX-NFG-IN D

on the CSITXRXA module

Signal to be routed to the corresponding input TXRX-POS-IN

on the CSITXRXA module

Signal to be routed to the corresponding input TXRX-DIG-ON-IN D

on the CSITXRXA module

Signal to be routed to the corresponding input TXRX-DIG-OFF-IN D on the CSITXRXA module Signal to be routed to the corresponding input TXRX-DIG-ON-OUT D on the CSITXRXA module Signal to be routed to the corresponding input TXRX-DIG-OFF-OUT D on the CSITXRXA module Signal to be routed to the corresponding input TXRX-DIG-STORE D on the CSITXRXA module

OPS USED FOR TESTING: 3.18.06
COMPILER USED FOR TESTING: 3.18.04
SAMPLE PROGRAM: CSITSTA
REVISION HISTORY: None