


**Partner: Cary Audio**  
**Model: DVD-6**  
**Device Type: Transport Decks**



## GENERAL INFORMATION

<b>SIMPLWINDOWS NAME:</b>	Cary Audio DVD-6
<b>CATEGORY:</b>	Transport Decks
<b>VERSION:</b>	1.0
<b>SUMMARY:</b>	This module controls the Cary Audio DVD-6. It does not provide feedback.
<b>GENERAL NOTES:</b>	This module will control the Cary Audio DVD-6. It does not provide feedback due to limitations of the DVD-6.
<b>CRESTRON HARDWARE REQUIRED:</b>	CNXC0M, CNXC0M-2, ST-COM, C2COM, C2COM-2, C2COM-3
<b>SETUP OF CRESTRON HARDWARE:</b>	RS232 Baud: 9600 Parity: None Data Bits: 8 Stop Bits: 1
<b>VENDOR FIRMWARE:</b>	None
<b>VENDOR SETUP:</b>	None
<b>CABLE DIAGRAM:</b>	CNSP-121

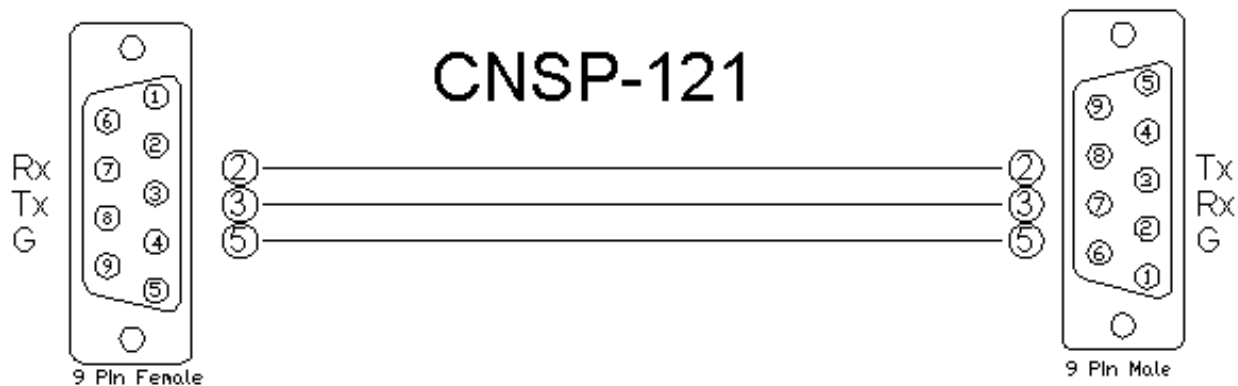

**Partner: Cary Audio**  
**Model: DVD-6**  
**Device Type: Transport Decks**


**CONTROL:**

<b>Power_On/Off/Toggle</b>	D	Pulse to turn the DVD player on and off.
<b>Volume_Up/Down</b>	D	Press and hold to adjust the volume.
<b>Volume_Mute</b>	D	Pulse to turn the volume mute on and off.
<b>Play</b>	D	Pulse to play the disc.
<b>Stop</b>	D	Pulse to stop the disc.
<b>Pause</b>	D	Pulse to pause the disc.
<b>Reverse</b>	D	Pulse to step through the fast reverse speeds.
<b>Forward</b>	D	Pulse to step through the fast forward speeds.
<b>Previous_Chapter/Track</b>	D	Pulse to go to the previous chapter or track.
<b>Next_Chapter/Track</b>	D	Pulse to go to the next chapter or track.
<b>Tray_Open/Close</b>	D	Pulse to open and close the disc tray.
<b>Key_*</b>	D	Pulse to enter the chapter or track number to jump to. YOU MUST PULSE THE Key_Goto INPUT FIRST. YOU MUST PULSE THE Menu_Enter AFTER ENTERING THE CHAPTER NUMBER.
<b>Key_+10</b>	D	Pulse to jump to a chapter or track greater than 9. To jump to a chapter greater than 19 pulse this input twice.
<b>Key_Goto</b>	D	Pulse to enable the keypad to jump to a specific chapter or track.
<b>Main_Menu</b>	D	Pulse to go to the disc menu.
<b>Menu_Up/Down/Left/Right/Enter</b>	D	Pulse to navigate through the menus.
<b>Setup_Menu</b>	D	Pulse to go to the DVD player's set up menu.
<b>Title</b>	D	Pulse to activate the DVD title function.
<b>Repeat</b>	D	Pulse to cycle through the repeat title/chapter modes.
<b>Repeat_A-B</b>	D	Pulse to cycle through the repeat A-B modes.

**Partner: Cary Audio**  
**Model: DVD-6**  
**Device Type: Transport Decks**



Angle	D	Pulse to activate the DVD angle function.
Subtitle	D	Pulse to cycle through the subtitle languages.
Audio	D	Pulse to cycle through the audio languages.
OSD	D	Pulse to cycle through the On Screen Display modes.

### FEEDBACK:

To_Device\$	S	Serial signal to be routed to a serial com port.
-------------	---	--

### TESTING:

OPS USED FOR TESTING:	PRO2: 3.137 CNMSX-Pro: 5.14.02x
COMPILER USED FOR TESTING:	2.05.22
SAMPLE PROGRAM:	Cary Audio DVD-6 Demo
REVISION HISTORY:	V. 1.0