

SIMPLWINDOWS
NAME: Gentner (Multiple Units) Presets
CATEGORY: Conferencing
VERSION: 1.0
SUMMARY: Allows activation of all 32 available presets
GENERAL NOTES: The commands used for the XAP800/XAP400/PSR1212 mixer are similar to the commands used for the Gentner AP800/AP400. Therefore the same modules developed for the XAP800/XAP400/PSR1212 may work on other (past and future) Gentner products. To allow for this flexibility of use, you must specify which Gentner model is being controlled using the TYPE-ID-ASCII parameter field. Currently valid entries are a single digit from 1 to 7 with no suffix as shown below:

- For XAP400, use 7
- For XAP800, use 5
- For PSR1212, use 4
- For AP400, use 3
- For AP10, use 2
- For AP800, use 1

Multiple devices can be connected to the Gentner bus and controlled from a single RS232 port. Therefore, it is also necessary to enter the Unit ID of the device being controlled. This should be entered in the UNIT-ID-ASCII parameter field as a single digit number from 0-8 with no suffix.

This module provides three controls for each preset.

1. Execute the preset and set the state to on - use the PRESET-* -ON inputs
2. Set the preset state to off - use the PRESET-* - OFF inputs
3. Execute the preset and set the state to off - use the PRESET-* -ON/OFF inputs.

With these controls, multiple presets can be active at the same time, and can be turned on/off at will. This module is set up such that multiple inputs can be activated simultaneously, and all commands will be sent to the Gentner system.

CRESTRON
HARDWARE
REQUIRED: CNXCOM,
ST-COM
SETUP OF CRESTRON **HARDWARE:** Baud Rate -38400
Parity - None
Data Bits - 8
Stop Bits - 1

RTS and CTS Handshaking should be enabled to insure no data is lost.

VENDOR FIRMWARE: PSR1212 - 1.0.3
XAP800 - 1.1.0
XAP400 - 1.0.1
VENDOR SETUP: Flow control should be set to "on". The baud rate should be set to 38400.
CABLE NUMBER: CNSP-141

CONTROL:

PRESET-*-ON	D	Pulse to execute a preset and set the state to on
PRESET-*-OFF	D	Pulse to set the preset state to off
PRESET-*-ON/OFF	D	Pulse to execute a preset and set the state to off
TYPE-ID-ASCII	P	Enter 4 for PSR1212, 5 for XAP800, 7 for XAP400
UNIT-ID-ASCII	P	Enter the unit number of the XAP800/XAP400/PSR1212. Should be a number from 0-8

FEEDBACK:

GENTNER-TX\$	S	Serial signal to be routed to a 2-way RS232 port
---------------------	---	--

OPS USED FOR TESTING: 5.12.26x

COMPILER USED FOR TESTING: SimplWindows Version 1.61.12

SAMPLE PROGRAM: Gentner XAP800/PSR1212 Demo Program

REVISION HISTORY: None