



## CONTACT SUPPORT:

COMPANY NAME:	Home Automation Experts
SUPPORT CONTACT:	Derrick Picker
EMAIL ADDRESS:	derrick@haexperts.com
PHONE:	480-568-2660
ADDRESS:	67 South Higley Road, Suite 103-170, Gilbert, AZ 85296
NOTES:	Authentication Does Not Work With GMAIL, Please Use SMTP2GO (Free)

## GENERAL INFORMATION

SIMPLWINDOWS NAME:	Send Email & Text Message (DP)
CATEGORY:	e-control software
VERSION:	1.0
SUMMARY:	Allows a single Email or Text or Both to be sent from the processor.
GENERAL NOTES:	Only 1 text message and 1 email can be send simultaneously. However, 2 emails can be sent simultaneously.
CRESTRON HARDWARE REQUIRED:	Any 2-series or 3-series processor with ethernet and internet communication enabled.
SETUP OF CRESTRON HARDWARE:	Make sure you have DNS setup on processor.
VENDOR FIRMWARE:	N/A
VENDOR SETUP:	None
CABLE DIAGRAM:	TCP-IP Or Ethernet



CONTROL:		
Send	D	Pulse email trigger to send email/text message.
Email_Subject	S	Serial string for Email/Text subject. Can be used to dynamically change the subject. Leave parameter "Email Subject" as "" if this is used.
Email_Message	S	Serial string for Email/Text message. Can be used to dynamically change the subject. Leave parameter "Email Subject" as "" if this is used.

FEEDBACK:		
Email_Sent	D	High (1) Indicates the message was successfully sent.
Email_NotSent	D	High (1) Indicates the message failed to send successfully.
Email_Error	A	Indicates error code generated from successful or unsuccessful sent email/text.
Email_Error_Text	S	Indicates error description from successful or unsuccessful sent email/text.

PARAMETERS:		
Port	A	Port number for email server (SSL or TLS).
Use Email Or Phone Number	A	Select to use email or phone number for "Email/Phone Number" field.
Provider	A	Select provider used for phone number texting.
Email/Phone Number	S	Enter email address as (XXX@XXX.com) or if using text enter phone number without dashes and area code (XXXXXXXXXX).
Email CC	S	Optional email address to also send message to. If not used leave as "".
Email Subject	S	Email subject. Overrides serial input "Email_Subject". If not used leave as "".
Email Message	S	Email message. Overrides serial input "Email_Message". If not used leave as "".
Email From	S	Serial string used for reply address. Must be an email address.



<b>Email Server</b>	S	Email server address. Default is SMTP2go.com.
<b>Email Username</b>	S	Email server username.
<b>Email Password</b>	S	Email password.

## TESTING:

<b>OPS USED FOR TESTING:</b>	cp3_1.503.0026
<b>SIMPL WINDOWS USED FOR TESTING:</b>	4.09.04
<b>DEVICE DB USED FOR TESTING:</b>	94.00.001.00
<b>CRES DB USED FOR TESTING:</b>	68.06.001.00
<b>SYMBOL LIBRARY USED FOR TESTING:</b>	1060
<b>SAMPLE PROGRAM:</b>	Email-Text Example.smw
<b>REVISION HISTORY:</b>	1.0 – Initial Release