

Partner: Epson
Model: PowerLite Pro G5650W
Device Type: LCD Projector



GENERAL INFORMATION

SIMPLWINDOWS NAME:	Epson PowerLite G5650W IP v1.0
CATEGORY:	TV/Video Projector
VERSION:	1.0
SUMMARY:	<p>This module will control the Epson PowerLite G5650W via IP. Functions include Power, Source Select, A/V mute, Aspect Ratio, Freeze, Brightness, Contrast, Color, Tint, Sharpness, Volume and display elapsed Lamp Hour usage.</p> <p>This module was tested with the PowerLite G5650W. Epson uses the same protocol on most of their projectors. This module should also work on the following models:</p> <ul style="list-style-type: none">• PowerLite Pro G5950• PowerLite Pro G5900• PowerLite Pro G5750WU• PowerLite Pro G5650W• PowerLite Pro G5600• PowerLite Pro G5450WU• PowerLite Pro G5550• PowerLite 4300• PowerLite 4200W• PowerLite 4100• EB-G5950• EB-G5900• EB-G5800• EB-G5750WU• EB-G5650W• EB-G5600• EB-G5500• EB-G5450WU• EB-C520XH• EB-C520XE• EB-C520XB• EB-C450XB• EB-C450XE• EB-C450WU• EB-C450WH• EB-C400WU
GENERAL NOTES:	<p>This module will control the Epson PowerLite G5650W Projector via IP. True feedback is provided for power, input sources, a/v mute, freeze, aspect ratio, color mode and picture settings. When any command is sent to the projector, it will acknowledge that the command was processed properly and the corresponding feedback will be reflected at the outputs of this module.</p> <p>If it is desired to poll the projector for power state, you can assert the Poll_Enable input. When this input is high, the projector will be polled every 15 seconds to determine the state of power. If it is desired to poll the projector for picture setting changes made using the IR remote control, or by the controls on the projector itself, you can assert the Poll_Settings input. When this input is high, the projector will be polled every 45 seconds to determine the state of input source, picture mute, freeze,</p>

Partner: Epson
Model: PowerLite Pro G5650W
Device Type: LCD Projector



	<p>aspect ratio, color mode, brightness, contrast, sharpness, color, tint, volume and elapsed lamp hours. Typically, you could enable either polling option when the projector's particular control page is active and displayed on a touch panel. You would then disable polling at other times.</p> <p>NOTE: This module depends on feedback from the device. You cannot comment out the {{TCP/IP_Client_>>_RX\$}}. This module is System Builder compatible.</p>
CRESTRON HARDWARE REQUIRED:	C2-ENET
SETUP OF CRESTRON HARDWARE:	TCP/IP Client PORT: 3629
VENDOR FIRMWARE:	Unknown
VENDOR SETUP:	NONE
CABLE DIAGRAM:	N/A

CONTROL:

Power_<On/Off/Toggle>	D	Pulse to turn projector on or off.
Input_*	D	Pulse to select the desired source.
A/V_Mute_<On/Off/Toggle>	D	Pulse to turn A/V mute on or off.
Freeze_<On/Off/Toggle>	D	Pulse to turn freeze function on or off.
Aspect_*	D	Pulse to select desired aspect ratio.
Color_Mode_*	D	Pulse to select desired color mode.
Contrast_<Up/Down>	D	Press to adjust the contrast level.
Brightness_<Up/Down>	D	Press to adjust the brightness level.
Color_<Up/Down>	D	Press to adjust the color level.
Tint_<Up/Down>	D	Press to adjust the tint level.
Sharpness_<Up/Down>	D	Press to adjust the sharpness level.
Volume_<Up/Down>	D	Press to adjust the volume level.
Auto_Sync	D	Pulse to trigger the auto sync function.
Poll_Enable	D	Latch high to enable polling for power status.

Partner: Epson
Model: PowerLite Pro G5650W
Device Type: LCD Projector



Poll_Settings	D	Latch high to enable polling for remaining settings.
{{TCP/IP_Client_>>_Connect-F}}	D	Digital Signal to be routed from TCP/IP Client symbol Connect-F.
{{TCP/IP_Client_>>_status}}	A	Analog Signal to be routed from TCP/IP Client symbol status.
{{TCP/IP_Client_>>_RX\$}}	S	Serial Signal to be routed from TCP/IP Client symbol RX\$.

FEEDBACK:

Power_Is_<On/Off>	D	True feedback indicating current power state.
Input_Is_*	D	True feedback indicating current selected input source.
A/V_Mute_Is_<On/Off>	D	True feedback indicating current A/V mute state.
Freeze_Is_<On/Off>	D	True feedback indicating current freeze status.
Aspect_Is_*	D	True feedback indicating current aspect ratio.
Color_Mode_Is_*	D	True feedback indicating current color mode setting.
Contrast_Gauge	A	Analog value indicating current contrast level. For gauge on touchpanel
Brightness_Gauge	A	Analog value indicating current brightness level. For gauge on touchpanel.
Color_Gauge	A	Analog value indicating current color level. For gauge on touchpanel.
Tint_Gauge	A	Analog value indicating current tint level. For gauge on touchpanel.
Sharpness_Gauge	A	Analog value indicating current sharpness level. For gauge on touchpanel.
Volume_Gauge	A	Analog value indicating current volume level. For gauge on touchpanel.
Lamp_Hours	A	Analog value indicating current lamp hours. For digital gauge on touchpanel.
Connected	D	High to indicate that there is a TCP/IP connection.
Connection_Status_Text	S	Text indicating the status of the TCP/IP connection.
{{Connect_>>_TCP/IP_Client}}	D	Digital Signal to be routed to TCP/IP Client symbol Connect.
{{TX\$_>>_TCP/IP_Client}}	S	Serial Signal to be routed to TCP/IP Client symbol TX\$.

Partner: Epson
Model: PowerLite Pro G5650W
Device Type: LCD Projector

**PARAMETERS:**

Port	P	Parameter TCP/IP Port. Default 3629d.
Password	P	Parameter password for TCP/IP.

TESTING:

OPS USED FOR TESTING:	4.001.1012
SIMPL WINDOWS USED FOR TESTING:	2.12.39
CRES DB USED FOR TESTING:	22.00.012.00
DEVICE DB USED FOR TESTING:	28.05.004.00
SYMBOL LIBRARY USED FOR TESTING:	669
SAMPLE PROGRAM:	Epson PowerLite Pro G5650W IP v1.0 Demo PRO2
REVISION HISTORY:	v1.0