

Partner: Integra  
 Model: DTR-60.6  
 Device Type: Receiver



**GENERAL INFORMATION**

<b>SIMPLWINDOWS NAME:</b>	Integra DTR-60.6 IP v1.0
<b>CATEGORY:</b>	Receiver/Processor
<b>VERSION:</b>	1.0
<b>SUMMARY:</b>	This module provides TCP/IP control and feedback for the Integra DTR-60.6.
<b>GENERAL NOTES:</b>	<p>This module provides TCP/IP control of the Integra DTR-60.6. It also provides true feedback. Onkyo uses the same protocol for most of their receivers.</p> <p>NOTE This module will only work via TCP/IP. To control the receiver via RS232 please use the RS232 module.</p> <p>NOTE: There are two tuners in this receiver. Zones 2-3 use the same tuner. If two zones have the same tuner selected they will both be listening to the same station. There is also only one set tuner presets. Recalling preset 1 from zone 2 will recall the same station as recalling preset 1 from the main zone or zone 3.</p> <p>To store a tuner preset:</p> <ol style="list-style-type: none"> <li>1) Tune to the desired station.</li> <li>2) Pulse the *_Tuner_Store_Preset input.</li> <li>3) While the *_Tuner_Store_Preset_Is_Active, pulse one of the *_Tuner_Preset_* inputs.</li> </ol> <p>The store preset mode will only be active for 5 seconds. If two zones enter store preset mode at the same time, both store preset modes will reset when one of those zones selects a preset to store the station to.</p> <p>NOTE: There is only one set of 40 network presets. All zones use the same network presets. Recalling preset 23 from zone 3 will recall the same station as recalling preset 23 from the main zone.</p> <p>To store a network radio preset:</p> <ol style="list-style-type: none"> <li>1) Go to stations url.</li> <li>2) Pulse the *_Network_Store_Preset input. This will cause the current station to be stored in the next available network preset.</li> </ol>
<b>CRESTRON HARDWARE REQUIRED:</b>	C2ENET-1/2, C2I-MC3ENET-1
<b>SETUP OF CRESTRON HARDWARE:</b>	TCP/IP Client: Port: 60128d
<b>VENDOR FIRMWARE:</b>	1060-6110-1001-0202-0203
<b>VENDOR SETUP:</b>	You must go into the setup menu, select 7-Hardware Setup then 7-5. Network and enable Network Standby.
<b>CABLE DIAGRAM:</b>	N/A

**Partner: Integra**  
**Model: DTR-60.6**  
**Device Type: Receiver**


**CONTROL:**

<b>Main_Power_&lt;On/Off/Toggle&gt;</b>	D	Pulse to turn the main zone on or off.
<b>Main_Input_*</b>	D	Pulse to select the desired input for the main zone.
<b>Main_Volume_&lt;Up/Down&gt;</b>	D	Press and hold to adjust the main zone volume.
<b>Main_Volume_Mute_&lt;On/Off/Toggle&gt;</b>	D	Pulse to turn the main volume mute on and off.
<b>Main_Tuner_Key_&lt;0..9/Backspace/Clear&gt;</b>	D	Pulse to enter a station to tune to.
<b>Main_Tuner_Key_Enter</b>	D	Pulse to tune to the entered station.
<b>Main_Tuner_Key_&lt;Up/Down&gt;</b>	D	Pulse to start seeking the next station.
<b>Main_Tuner_Preset_&lt;1...40&gt;</b>	D	While the <b>Main_Tuner_Store_Preset_Is_Active</b> is high, pulsing one of these inputs will store the current band and station to the selected preset. While the <b>Main_Tuner_Store_Preset_Is_Active</b> is low, pulsing one of these inputs will recall the stored band and station.
<b>Main_Tuner_Preset_&lt;Up/Down&gt;</b>	D	Pulse to cycle through the tuner presets.
<b>Main_Tuner_Store_Preset</b>	D	Pulse to activate the tuner preset store mode. Tuner store preset mode will remain active for 5 seconds, until a <b>*_Preset_*</b> input is pulsed or until this input is pulsed again.
<b>Zone_&lt;2/3&gt;_Power_&lt;On/Off/Toggle&gt;</b>	D	Pulse to turn the desired zone on or off.
<b>Zone_&lt;2/3&gt;_Input_*</b>	D	Pulse to select the desired input for the desired zone.
<b>Zone_&lt;2/3&gt;_Volume_&lt;Up/Down&gt;</b>	D	Press and hold to adjust the volume for the desired zone.
<b>Zone_&lt;2/3&gt;_Volume_Mute_&lt;On/Off/Toggle&gt;</b>	D	Pulse to turn the volume mute on and off for the desired zone.
<b>Zone_&lt;2/3&gt;_Tuner_Key_&lt;0..9/Backspace/Clear&gt;</b>	D	Pulse to enter a station to tune to.
<b>Zone_&lt;2/3&gt;_Tuner_Key_Enter</b>	D	Pulse to tune to the entered station.
<b>Zone_&lt;2/3&gt;_Tuner_Key_&lt;Up/Down&gt;</b>	D	Pulse to start seeking the next station.
<b>Zone_&lt;2/3&gt;_Tuner_Preset_&lt;1...40&gt;</b>	D	While the <b>Zone_&lt;2/3&gt;_Tuner_Store_Preset_Is_Active</b> is high, pulsing one of these inputs will store the current band and station to the selected preset. While the <b>Zone_&lt;2/3&gt;_Tuner_Store_Preset_Is_Active</b> is low, pulsing one of these inputs will recall the stored band and station.
<b>Zone_&lt;2/3&gt;_Tuner_Preset_&lt;Up/Down&gt;</b>	D	Pulse to cycle through the tuner presets.

**Partner: Integra**  
**Model: DTR-60.6**  
**Device Type: Receiver**



Zone_<2/3>_Tuner_Store_Preset	D	Pulse to activate the tuner preset store mode. Tuner store preset mode will remain active for 5 seconds, until a *_Preset_* input is pulsed or until this input is pulsed again.
Sleep_<90/10>_Minutes	D	Pulse to set the time for the sleep timer and start the sleep timer clock.
Sleep_Off	D	Pulse to turn the sleep timer off.
Sleep_Cycle	D	Pulse to cycle through the sleep timer settings.
Front_Panel_Display_*	D	Pulse to set the receiver's front panel display brightness.
Menu	D	Pulse to turn the setup menu on and off.
Up/Down/Left/Right	D	Pulse to move through the menus.
Enter	D	Pulse to select the highlighted item in the menu.
Exit	D	Pulse to step back to the previous menu level.
Audio_Out_*	D	Pulse to set the audio output.
Monitor_Out_Resolution_*	D	Pulse to select the desired monitor output resolution.
Late_Night_<High/Low/Off/Cycle>	D	Pulse to select the desired late night mode.
Display_Cycle	D	Pulse to cycle through the display settings.
Surround_Mode_*	D	Pulse to select the desired surround mode. NOTE: Not all surround modes are available for all inputs.
Main_Net-Tune/Network/USB_*	D	Pulse to control the network inputs.
Main_Network_Preset_<1...40>	D	Pulse to select the desired network preset.
Main_Network_Store_Preset	D	Pulse to store the current station in the next available preset.
Net-Tune_Source_*	D	Pulse to select the desired network radio source directly.
Net-Tune_Hide_Popup_Message	D	Pulse to hide the popup window on the touch panel only. This will not hide the popup window on the receiver's on-screen display.
Net-Tune_Keyboard_*	D	Pulse to enter text for the different text requested by the Net-Tune_Waiting_For_* outputs.
Net-Tune_Keyboard_Enter	D	Pulse to send the entered text to the receiver.
Zone_<2/3>_Net-Tune/Network/USB_*	D	Pulse to control the network inputs.

**Partner: Integra**  
**Model: DTR-60.6**  
**Device Type: Receiver**



Zone_<2/3>_Network_Preset_<1...40>	D	Pulse to select the desired network preset.
Zone_<2/3>_Network_Store_Preset	D	Pulse to store the current station in the next available preset.
Initialize	D	Pulse to get the initial status.
Connect	D	Hold high to cause the TCP/IP Client to connect.
{{TCP/IP_Client_>>_Connect-F}}	D	Digital signal to be routed from the Connect-F output of the TCP/IP Client.
{{TCP/IP_Client_>>_status}}	A	Analog signal to be routed from the status output on the TCP/IP Client.
{{TCP/IP_Client_>>_RX\$}}	S	Serial data signal to be routed from the RX\$ output on the TCP/IP Client.

### FEEDBACK:

Main_Power_Is_<On/Off>	D	High to indicate current power status for the main zone.
Main_Input_Is_*	D	High to indicate the currently selected input for the main zone.
Main_Volume_Gauge	A	Analog output indicating the volume level for the main zone.
Main_Volume_Mute_Is_<On/Off>	D	High to indicate the current volume mute status for the main zone.
Main_Tuner_Frequency_Text	S	Serial signal indicating the currently tuned station frequency.
Main_Tuner_Preset_Is_<1...40>	D	High to indicate the currently selected tuner input.
Main_Tuner_Store_Preset_Is_Active	D	High to indicate that the store preset mode is active for the main zone. This will remain high for 5.0 seconds after the Main_Tuner_Store_Preset is pulsed.
Zone_<2/3>_Power_Is_<On/Off>	D	High to indicate current power status for each zone.
Zone_<2/3>_Input_Is_*	D	High to indicate the currently selected input for each zone.
Zone_<2/3>_Volume_Gauge	A	Analog output indicating the volume level for each zone.
Zone_<2/3>_Volume_Mute_Is_<On/Off>	D	High to indicate the current volume mute status for each zone.
Zone_<2/3>_Tuner_Frequency_Text	S	Serial signal indicating the currently tuned station frequency.
Zone_<2/3>_Tuner_Preset_Is_<1...40>	D	High to indicate the currently selected tuner input.
Zone_<2/3>_Tuner_Store_Preset_Is_Active	D	High to indicate that the store preset mode is active for each zone. This will remain high for 5.0 seconds after the Zone_<2/3>_Tuner_Store_Preset is pulsed.

**Partner: Integra**  
**Model: DTR-60.6**  
**Device Type: Receiver**



Sleep_Time_Digital_Gauge	A	Analog value indicating the current number of minutes remaining in the sleep timer. To be displayed using a digital gauge on a touch panel.
Front_Panel_Display_Is_*	D	High to indicate the current front panel display brightness setting.
Audio_Out_*	D	High to indicate the current audio out setting.
Monitor_Out_Resolution_*	D	High to indicate the current monitor out resolution setting.
Surround_Mode_Is_*	D	High to indicate the currently selected surround mode.
Main_Net-Tune/Network/USB_Is_*	D	High to indicate the current Net-Tune/Network/USB transport status.
Main_Net_Tune/Network/USB_Line_*_Text	S	Serial signals displaying the Net-Tune/Network/USB menus.
Main_Net_Tune/Network/USB_Cursor_Position_Is_Line_*	D	High to indicate which Net-Tune/Network/USB menu line is currently highlighted.
Main_Net_Tune/Network/USB_*_Text	S	Serial signals indicating the artist, album, title, time and track for the currently playing on the Net-Tune/Network/USB.
Main_Net_Tune/Network/USB_Repeat_Is_*	D	High to indicate the current repeat status for the Net-Tune/Network/USB.
Main_Net_Tune/Network/USB_Shuffle_Is_*	D	High to indicate the current shuffle status for the Net-Tune/Network/USB.
Main_Network_Preset_Is_*	D	High to indicate the currently selected network preset.
Net-Tune_Source_Is_*	D	High to indicate the selected main net-tune source.
Net-Tune_Waiting_Text	S	Serial signal indicating the type of input the receiver is waiting for.
Net-Tune_Waiting_For_Input	D	High to indicate that the receiver is waiting for input of some kind. This is an OR of all of the other Net-Tune_Waiting_For_* outputs.
Net-Tune_Waiting_For_*	D	High to indicate the type of input the receiver is waiting for.
Net-Tune_Popup_Text_Is_*	D	High to indicate the location of the message text on the popup window.
Net-Tune_Top_Title_Text	S	Serial signal indicating the top title text for the popup window.
Net-Tune_Popup_Title_Text	S	Serial signal indicating the popup title text for the popup window.
Net-Tune_Popup_Message_Text	S	Serial signal indicating the message text for the popup window.
Net-Tune_Item_<1..6>_Title_Text	S	Serial signal indicating the item title text for the popup window when the Main_Net-Tune/Network/USB_Popup_Text_Is_List is high.
Net-Tune_Item_<1..6>_Parameter_Text	S	Serial signal indicating the item parameter text for the popup window when

**Partner: Integra**  
**Model: DTR-60.6**  
**Device Type: Receiver**



		the Net-Tune_Popup_Text_Is_List is high.
<b>Net-Tune_Popup_Button_&lt;1/2&gt;_Is_Highlighted</b>	D	High to indicate the currently highlighted button on the popup window. Once the desired button is highlighted, pulse the Main_Net-Tune/Network/USB_Select input.
<b>Net-Tune_Button_&lt;1/2&gt;_Text</b>	S	Serial signal indicating the button text for the buttons on the popup window.
<b>Net-Tune_Keyboard_Text</b>	S	Serial signal indicating the text being entered using the Net-Tune_Keyboard_* inputs.
<b>Net-Tune_Keyboard_Shift_Is_Active</b>	D	High to indicate that the shift function is active. The next Net-Tune_Keyboard_* input that is pulsed will be the shifted character.
<b>Net-Tune_Keyboard_Caps_Lock_Is_Active</b>	D	High to indicate that the caps lock function is active.
<b>Zone_&lt;2/3&gt;_Net-Tune/Network/USB_Is_*</b>	D	High to indicate the current Net-Tune/Network/USB transport status.
<b>Zone_&lt;2/3&gt;_Net_Tune/Network/USB_Line_*_Text</b>	S	Serial signals displaying the Net-Tune/Network/USB menus.
<b>Zone_&lt;2/3&gt;_Net_Tune/Network/USB_Cursor_Position_Is_Line_*</b>	D	High to indicate which Net-Tune/Network/USB menu line is currently highlighted.
<b>Zone_&lt;2/3&gt;_Net_Tune/Network/USB_*_Text</b>	S	Serial signals indicating the artist, album, title, time and track for the currently playing on the Net-Tune/Network/USB.
<b>Zone_&lt;2/3&gt;_Net_Tune/Network/USB_Repeat_Is_*</b>	D	High to indicate the current repeat status for the Net-Tune/Network/USB.
<b>Zone_&lt;2/3&gt;_Net_Tune/Network/USB_Shuffle_Is_*</b>	D	High to indicate the current shuffle status for the Net-Tune/Network/USB.
<b>Zone_&lt;2/3&gt;_Network_Preset_Is_*</b>	D	High to indicate the currently selected network preset.
<b>Initialize_Busy</b>	D	High to indicate that the module is getting the initial status from the receiver.
<b>Connected</b>	D	High to indicate that the TCP/IP Client is connected.
<b>Connection_Status_Text</b>	S	Serial signal indicating the current TCP/IP Client connection status.
<b>{{Connect_&gt;&gt;_TCP/IP_Client}}</b>	D	Digital signal to be routed to the Connect input on the TCP/IP Client.
<b>{{TX\$_&gt;&gt;_TCP/IP_Client}}</b>	S	Serial data signal to be routed to the TX\$ input on the TCP/IP Client.

**Partner: Integra**  
**Model: DTR-60.6**  
**Device Type: Receiver**

**TESTING:**

<b>OPS USED FOR TESTING:</b>	PRO2: v4.008.0026 PRO3: v1.010.0060
<b>SIMPL WINDOWS USED FOR TESTING:</b>	4.02.65
<b>DEVICE DB USED FOR TESTING:</b>	65.05.003.00
<b>CRES DB USED FOR TESTING:</b>	51.05.007.00
<b>SYMBOL LIBRARY USED FOR TESTING:</b>	944
<b>SAMPLE PROGRAM:</b>	2-Series: Integra DTR-60.6 IP v1.0 Demo PRO2.smw 3-Series: Integra DTR-60.6 IP v1.0 Demo PRO3.smw
<b>REVISION HISTORY:</b>	v1.0 – Initial Release