

## CONTACT SUPPORT:

COMPANY NAME:	Ksenia Security srl	
SUPPORT CONTACT:	Claudio Laneve	
EMAIL ADDRESS:	helpdesk@kseniasecurity.com	
PHONE:	+39 0735 751646	
ADDRESS:	SP Valtesino 44, 63065 Ripatransone (AP) – Italy	
NOTES:	Module for control Ksenia lares 4.0 IoT platform for Security and BMS. For license request send processor serial and mac address to helpdesk@kseniasecurity.com	
	Please do not disable the TLS configuration on the lares 4.0 General Option in order to let the driver works properly.	

## http://application.market.com



GENERAL INFORMATION					
SIMPLWINDOWS NAME:	KSI14X00XX-X00.umc				
CATEGORY:	Ksenia				
VERSION:	1.0				
SUMMARY:	Ksenia lares 4.0 IoT platform for Security and BMS				
GENERAL NOTES:					
CRESTRON HARDWARE REQUIRED:	3-Series with Ethernet card installed				
SETUP OF CRESTRON HARDWARE:	Connection: WebSocket – ONLY FOR 3 SERIES PROCESSOR				
VENDOR FIRMWARE:	(Very important to include this for device modules)				
VENDOR SETUP:	DIN-AP3 connected to lares 4.0 with Cat5 cable through ethernet switch.				
CABLE DIAGRAM:	Use standard Cat 5 ethernet cable.				

## http://application.market.com



## **CONTROL:**

CONTROL		
Signal/Function Name	<u>D,S,A</u>	Digital, Serial, Analog signal property definition.
License\$	S	Serial number for enable this module.
Mac_Address\$	S	Mac address of Ethernet card of lares
User_id\$	S	User id
User_Pin\$	S	User password
btn_Connect	D	Pulse to open connection to lares
btn_Disconnect	D	Pulse to close the connection with lares
btn_Call_Scenario	D	Call a scene stored on lares
ai_Scene_Number	А	Number of scene to call [from 1 to 512]
btn_Partition_Arm_Delay[X]	D	Arm partition with delay time settings set on lares.
btn_Partition_Arm_Istant[X]	D	Instant arm of partition
btn_Partition_Disarm[X]	D	Instant disarm of partition
btn_ByPass_Input_Tg[X]	D	Toggle state of Zone BYPASS
btn_Set_Output_On[X]	D	Set output X to on
btn_Set_Output_Off[X]	D	Set output X to off

#### http://application.market.com



FEEDBACK:		
fb_Invalid_License_Installed	D	Indicates the system is initialize driver.
fb_Login_is_Ok	D	Report On status of device
ao_Internal_Temperature	A	Report Off status of device
ao_External_Temperature	А	Indicates the channel X is report Over temperature Fault
fb_Program_Session_is_Opened	D	Indicates the channel X SOA thermal is active
Message\$	S	Indicates the channel X output is clip state
ao_Mobile_Signal_Level	А	Report signal level of mobile carrier
MobileCarrier\$	S	Report name of mobile carrier and connection type(Hedge, 3g,4g ecc)
MobileCreditAvaliable\$	S	Report credit of the sim (in local money format)
Tamper\$	S	Report generic tamper error
Fault\$	S	Report generic fault problem
Login\$	S	Report login information or problem
fb_Command_is_Ok	D	Command are accepted by the system
fb_System_Tamper	D	Reports system tamper
fb_Battery_Fail	D	Report battery fail error
fb_Battery_Low_Level	D	Report low level battery
fb_Battery_Charger_Fail	D	Report battery charger is fault
fb_Fuse_Fault	D	Report a fuse fault
fb_Power_Fail	D	Report a power fail of the system
fb_Low_Power_Fail	D	Report a low power supply

©2013 Crestron Electronics, Inc. 15 Volvo Drive · Rockleigh, NJ 07647 800.237.2041 / 201.767.3400

## http://application.market.com



fb_Tamper_Bus_Peripheral	D	Report a tamper alarm of bus peripheral
fb_Tamper_Bus_Wireless	D	Report a tamper alarm of wireless peripheral
fb_Jamming_868_Wireless	D	Report a jammed 868 frequency
fb_Lost_Bus_Peripheral	D	Report lost bus peripheral
fb_Lost_Wireless_Peripheral	D	Report lost wireless peripheral
fb_PSTN_Link_is_Ok	D	PSTN analogic line is ok
fb_PSTN_Line_Ko	D	PSTN analogic line is KO (only if PSTN line was present )
fb_Eht_Remote_Ko	D	Report if system is not able to connect to the cloud (no internet)
fb_GSM_Line_Ko	D	GSM Line KO. Only if GSM system is installed
fb_GSM_Credit_Ko	D	Report GSM credit is 0.
fb_GSM_Expired	D	Report GSM sim is expired
fb_Tamper	D	Report generic tamper alarm (Use Tamper\$ for more information)
fb_Fault	D	Report generic faul. (Use Fault\$ for more information)
fb_Connected	D	1 : Crestron is connected to the system. 0: Disconnected.
fb_Partition_is_Armed[X]	D	Report if partition X is armed
fb_Partition_Alarm_On[X]	D	Report if partition X on alarm
fb_Partition_Timer_Enter[X]	D	Pulsed for 1 seconds to report partition X time to enter is now active
fb_Partition_Timer_Exit[X]	D	Pulsed for 1 seconds to report partition X time to leave is now active
fb_Partition_Tamper[X]	D	Report tamper on partition X
fb_Partition_Ready[X]	D	Report partition X is ready
fb_Input_Alarm[X]	D	Report input (or zone ) X is on state alarm

©2013 Crestron Electronics, Inc. 15 Volvo Drive · Rockleigh, NJ 07647 800.237.2041 / 201.767.3400

## http://application.market.com



fb_Input_Masquerade_Alarm[X]	D	Report if input X is masquerade
fb_Input_Tamper_Allarm[X]	D	Report input X tamper alarm are active.
fb_Input_Error_Alarm[X]	D	Report input X error alarm are active.
fb_Input_Bypass_is_On[X]	D	Report if input X is bypassed
fb_Output_is_On[X]	D	Report output X state.

#### http://application.market.com



Т	ES	TI	N	G:	

1.501.0105
4.08.15
89.00.003.00
65.00.006.00
1045
Ksenia_lares_4.smw
1.0

## http://application.market.com