



Manufacturer: Crestron Germany
Model: Loewe LCD

GENERAL INFORMATION:

SIMPLWINDOWS NAME:	Loewe LCD IR v3 CG
CATEGORY:	TV
VERSION:	v3
SUMMARY:	Offers bi-directional IR remote control emulation for Loewe LCD TVs via serial communication.
GENERAL NOTES:	-
CRESTRON HARDWARE REQUIRED:	3-series processor
SETUP OF CRESTRON HARDWARE:	Serial connection to Loewe LCD TV established.
VENDOR FIRMWARE:	Tested with: Loewe Chassis SL3xx V4.1.0



Manufacturer: Crestron Germany
Model: Loewe LCD

CONTROL:		
Rx	S	Connect to [rx\$] of serial interface.
[Enable_IR]	D	Pulse to enable control via the Loewe remote control device supplied with the TV.
[Disable_IR]	D	Pulse to disable control via the Loewe remote control device supplied with the TV.
[Feedback_On]	D	Pulse to activate all the *_Fb feedback signals.
[Feedback_Off]	D	Pulse to de-activate all the *_Fb feedback signals.
[Mute]	D	Pulse to toggle the mute status.
[TV_on/off]	D	Pulse to toggle the TV on/off.
[TV_on]	D	Pulse to switch on the TV.
[TV_off]	D	Pulse to switch off the TV.
[TV_Mode_On]	D	Pulse to select the mode "tv".
[Radio_Mode_On]	D	Pulse to select the mode "radio".
[Rec_Menu]	D	Pulse to open the recording menu.
[Format]	D	Pulse to select the favorites.
[Key_0]	D	Pulse/Hold to simulate a press of the "0"-button.

Manufacturer: Crestron Germany
Model: Loewe LCD

CONTROL:		
[Key_1]	D	Pulse/Hold to simulate a press of the "1"-button.
[Key_2]	D	Pulse/Hold to simulate a press of the "2"-button.
[Key_3]	D	Pulse/Hold to simulate a press of the "3"-button.
[Key_4]	D	Pulse/Hold to simulate a press of the "4"-button.
[Key_5]	D	Pulse/Hold to simulate a press of the "5"-button.
[Key_6]	D	Pulse/Hold to simulate a press of the "6"-button.
[Key_7]	D	Pulse/Hold to simulate a press of the "7"-button.
[Key_8]	D	Pulse/Hold to simulate a press of the "8"-button.
[Key_9]	D	Pulse/Hold to simulate a press of the "9"-button.
[EPG]	D	Pulse to simulate a press of the "EPG"-button.
[Assist]	D	Pulse to simulate a press of the "HOME"-button.
[PIP]	D	Pulse to simulate a press of the "PIP"-button.
[Teletext]	D	Pulse to simulate a press of the "TEXT"-button.
[Menu]	D	Pulse to simulate a press of the "MENU"-button.
[End]	D	Pulse to simulate a press of the "BACK"-button.
[Info]	D	Pulse to simulate a press of the "INFO"-button.
[Volume_+]	D	Pulse to simulate a press of the "+V"-button.
[Volume_-]	D	Pulse to simulate a press of the "-V"-button.

Manufacturer: Crestron Germany
Model: Loewe LCD

CONTROL:		
[Program_+]	D	Pulse to simulate a press of the "P+"-button.
[Program_-]	D	Pulse to simulate a press of the "P-"-button.
[Up]	D	Pulse to simulate a press of the "Up"-button.
[Down]	D	Pulse to simulate a press of the "Down"-button.
[Left]	D	Pulse to simulate a press of the "Left"-button.
[Right]	D	Pulse to simulate a press of the "Right"-button.
[OK]	D	Pulse to simulate a press of the "OK"-button.
[Red]	D	Pulse to simulate a press of the "red"-button.
[Green]	D	Pulse to simulate a press of the "green"-button.
[Yellow]	D	Pulse to simulate a press of the "yellow"-button.
[Blue]	D	Pulse to simulate a press of the "blue"-button.
[AV1]	D	Pulse to select AV1.
[AVS]	D	Pulse to select AVS.
[VGA]	D	Pulse to select VGA.
[HDMI1]	D	Pulse to select HDMI1.
[HDMI2]	D	Pulse to select HDMI2.

Manufacturer: Crestron Germany
Model: Loewe LCD

CONTROL:		
[HDMI3]	D	Pulse to select HDMI3.
[HDMI4]	D	Pulse to select HDMI4.
[HDR_Pause]	D	Pulse to simulate a press of the "HDR Pause"-button.
[HDR_Rewind]	D	Pulse to simulate a press of the "HDR Rewind"-button.
[HDR_Fast_forward]	D	Pulse to simulate a press of the "HDR Fast forward"-button.
[HDR_Play]	D	Pulse to simulate a press of the "HDR Play"-button.
[HDR_Stop]	D	Pulse to simulate a press of the "HDR Stop"-button.
[HDR_Record]	D	Pulse to simulate a press of the "HDR Record"-button.
[Web]	D	Pulse to simulate a press of the "Web"-button.

Manufacturer: Crestron Germany
Model: Loewe LCD

FEEDBACK:		
Tx	S	Connect to [tx\$] of serial interface.
[Mute_Fb]	D	High: Indicates that "mute" on the Loewe remote control device is pressed.
[TV_on/off_Fb]	D	High: Indicates that "power on/off" on the Loewe remote control device is pressed.
[TV_on_Fb]	D	High: Indicates that "power on" on the Loewe remote control device is pressed.
[TV_off_Fb]	D	High: Indicates that "power off" on the Loewe remote control device is pressed.
[TV_Mode_On_Fb]	D	High: Indicates that "tv" on the Loewe remote control device is pressed.
[Radio_Mode_On_Fb]	D	High: Indicates that "radio"/"audio" on the Loewe remote control device is pressed.
[Rec_Menu_Fb]	D	High: Indicates that "DR+" on the Loewe remote control device is pressed.
[Format_Fb]	D	High: Indicates that "*" on the Loewe remote control device is pressed.
[Key_0_Fb]	D	High: Indicates that "0" on the Loewe remote control device is pressed.
[Key_1_Fb]	D	High: Indicates that "1" on the Loewe remote control device is pressed.
[Key_2_Fb]	D	High: Indicates that "2" on the Loewe remote control device is pressed.
[Key_3_Fb]	D	High: Indicates that "3" on the Loewe remote control device is pressed.
[Key_4_Fb]	D	High: Indicates that "4" on the Loewe remote control device is pressed.
[Key_5_Fb]	D	High: Indicates that "5" on the Loewe remote control device is pressed.
[Key_6_Fb]	D	High: Indicates that "6" on the Loewe remote control device is pressed.
[Key_7_Fb]	D	High: Indicates that "7" on the Loewe remote control device is pressed.

Manufacturer: Crestron Germany
Model: Loewe LCD

FEEDBACK:		
[Key_8_Fb]	D	High: Indicates that "8" on the Loewe remote control device is pressed.
[Key_9_Fb]	D	High: Indicates that "9" on the Loewe remote control device is pressed.
[EPG_Fb]	D	High: Indicates that "EPG" on the Loewe remote control device is pressed.
[Assist_Fb]	D	High: Indicates that "HOME" on the Loewe remote control device is pressed.
[PIP_Fb]	D	High: Indicates that "PIP" on the Loewe remote control device is pressed.
[Teletext_Fb]	D	High: Indicates that "TEXT" on the Loewe remote control device is pressed.
[Menu_Fb]	D	High: Indicates that "MENU" on the Loewe remote control device is pressed.
[End_Fb]	D	High: Indicates that "BACK" on the Loewe remote control device is pressed.
[Info_Fb]	D	High: Indicates that "INFO" on the Loewe remote control device is pressed.
[Volume+_Fb]	D	High: Indicates that "+V" on the Loewe remote control device is pressed.
[Volume-_Fb]	D	High: Indicates that "V-" on the Loewe remote control device is pressed.
[Program+_Fb]	D	High: Indicates that "P+" on the Loewe remote control device is pressed.
[Program-_Fb]	D	High: Indicates that "P-" on the Loewe remote control device is pressed.
[Up_Fb]	D	High: Indicates that "Up" on the Loewe remote control device is pressed.
[Down_Fb]	D	High: Indicates that "Down" on the Loewe remote control device is pressed.
[Left_Fb]	D	High: Indicates that "Left" on the Loewe remote control device is pressed.
[Right_Fb]	D	High: Indicates that "Right" on the Loewe remote control device is pressed.

Manufacturer: Crestron Germany
Model: Loewe LCD

FEEDBACK:		
[OK_Fb]	D	High: Indicates that "OK" on the Loewe remote control device is pressed.
[Red_Fb]	D	High: Indicates that "Red" on the Loewe remote control device is pressed.
[Green_Fb]	D	High: Indicates that "Green" on the Loewe remote control device is pressed.
[Yellow_Fb]	D	High: Indicates that "Yellow" on the Loewe remote control device is pressed.
[Blue_Fb]	D	High: Indicates that "Blue" on the Loewe remote control device is pressed.
[AV1_Fb]	D	High: Indicates that "AV1" is selected.
[AVS_Fb]	D	High: Indicates that "AVS" is selected.
[VGA_Fb]	D	High: Indicates that "VGA" is selected.
[HDMI1_Fb]	D	High: Indicates that "HDMI1" is selected.
[HDMI2_Fb]	D	High: Indicates that "HDMI2" is selected.
[HDMI3_Fb]	D	High: Indicates that "HDMI3" is selected.
[HDMI4_Fb]	D	High: Indicates that "HDMI4" is selected.
[HDR_Pause_Fb]	D	High: Indicates that "HDR Pause" on the Loewe remote control device is pressed.
[HDR_Rewind_Fb]	D	High: Indicates that "HDR Rewind" on the Loewe remote control device is pressed.
[HDR_Fast_forward_Fb]	D	High: Indicates that "HDR f.f." on the Loewe remote control device is pressed.
[HDR_Play_Fb]	D	High: Indicates that "HDR Play" on the Loewe remote control device is pressed.
[HDR_Stop_Fb]	D	High: Indicates that "HDR Stop" on the Loewe remote control device is pressed.
[HDR_Record_Fb]	D	High: Indicates that "HDR Record" on the Loewe remote control device is pressed.



**Manufacturer: Crestron Germany
Model: Loewe LCD**

FEEDBACK:

[Web_Fb]	D	High: Indicates that “web” on the Loewe remote control device is pressed.



Manufacturer: Crestron Germany
Model: Loewe LCD

PARAMETERS:

-	-	-

TESTING:

OPS USED FOR TESTING:	MC3: 1.501.0013
SIMPL WINDOWS USED FOR TESTING:	4.03.20
CRESTRON DB USED FOR TESTING:	54.05.005.00
DEVICE DB USED FOR TESTING:	72.00.001.00
SAMPLE PROGRAM:	Loewe_Demo.smw