



Model: Mura MPX Series



GENERAL INFORMATION		
SIMPLWINDOWS NAME:	Matrox Mura MPX Series v1.0	
CATEGORY:	Miscellaneous	
VERSION:	v1.0	
SUMMARY:	This module will control the Matrox Mura MPX Series video processor card via TCP/IP.	
GENERAL NOTES:	This module will provide the basic controls for the Matrox Mura MPX Series video processor: Display adapter info, display available sources, creating and editing layouts. This module was tested with a Matrox Mura™ MPX-4/4.	
CRESTRON HARDWARE REQUIRED:	2-Series Processor w/Ethernet port, 3-Series Processor w/Ethernet port	
SETUP OF CRESTRON HARDWARE:	N/A	
VENDOR FIRMWARE:	v1.0	
VENDOR SETUP:	N/A	
CABLE DIAGRAM:	N/A	

CONTROL:		
Start	D	Pulse to start the running the unit API.
Stop	D	Pulse to stop the unit API from running.
Reboot	D	Press and hold for 10s to reboot the PC running the API.
Shutdown	D	Press and hold for 10s to shutdown the PC running the API.
Select_Net_Info	D	Pulse to call up the Matrox card information.
Select_Sources	D	Pulse to select sources page and update available source information.
Select_Layouts	D	Pulse to select layouts page and update available layout information.
Access_Net_Info_ <up down=""></up>	D	Pulse to scroll through card network information.
Layout_List_Top	D	Pulse to get to top of layout list.





Model: Mura MPX Series



Layout_List_ <up down=""></up>	D	Pulse to scroll through layout list pages.
Layout_List_Select_<1-10>	D	Pulse to select layout in the layout list field.
Apply_Layout	D	Pulse to apply layout selected in layout list.
Create_Layout	D	Press and hold for 1s to create new layout.
Rename_Layout	D	Press and hold for 1s to rename selected in layout list.
Copy_Layout	D	Press and hold for 1s to copy layout selected in layout list to a new layout.
Delete_Layout	D	Press and hold for 1s to delete layout selected in layout list.
Edit_Layout	D	Pulse to edit layout selected in layout list.
Source_List_Top	D	Pulse to get to top of source list.
Source_List_ <up down=""></up>	D	Pulse to scroll through source list pages.
Source_List_Select_<1-10>	D	Pulse to select source in the source list field.
Rename_Source	D	Press and hold for 1s to rename source.
Window_List_Top	D	Pulse to get to top of window list.
Window_List_ <up down=""></up>	D	Pulse to scroll through window list pages.
Window_List_Select_<1-10>	D	Pulse to select window in the window list field.
Delete_Window	D	Pulse to delete window selected in window list.
New_Window	D	Pulse to add new window to selected layout and display new window subpage.
New_Window_Clear	D	Pulse to clear new window subpage.
Edit_Window	D	Pulse to edit selected window in window list and to display edit window subpage.
Edit_Window_Clear	D	Pulse to clear new window subpage.
Add_Window	D	Pulse to add new window to selected layout. Must have location, size and inputs selected first.
Width_Select	D	Pulse to select width property to apply to new window.
Height_Select	D	Pulse to select height property to apply to new window.





Model: Mura MPX Series



Position_X_Select	D	Pulse to select X-axis location property to apply to new window.
Position_Y_Select	D	Pulse to select Y-axis location property to apply to new window.
Select_Window_<0-9>	D	Pulse to set properties of new window.
Select_Window_Clear	D	Pulse to clear selected property of new window.
Window_Height_ <up down=""></up>	D	Press to adjust height of existing selected window.
Window_Width_ <up down=""></up>	D	Press to adjust width of existing selected window.
Window_Position_Y_ <up down=""></up>	D	Press to adjust position of existing selected window.
Window_Position_X_ <up down=""></up>	D	Press to adjust position of existing selected window.
Keyboard_*	D	Pulse to edit text in keyboard field.
Keyboard_Send	D	Pulse to send new text to field/parameter being edited.

FEEDBACK:		
Is_Running	D	Indicates that the card is currently running.
Is_Not_Running	D	Indicates that the card is currently not running.
Current_Status_Text	S	Displays the card's current running status.
Reboot_Status	D	Will indicate that the reboot is triggered after "Reboot" signal is held for 10s.
Shutdown_Status	D	Will indicate that the shutdown is triggered after "Shutdown" signal is held for 10s.
Display_Sources_Page	D	Pulse to display the sources page.
Display_Layouts_Page	D	Pulse to display the layouts page.
Net_Auto_IP_Text	S	Displays the current card's auto IP status.
Net_Auto_DNS_Text	S	Displays the current card's auto DNS status.
Net_DNS_Address_Text	S	Displays the current card's DNS Address.
Net_Info_Text	S	Displays the current card's net info status.
Net_IP_Address0_Text	S	Displays the current card's IP address0.





Model: Mura MPX Series



Net_Subnet_Mask0_Text	S	Displays the current card's subnet mask0.
Net_IP_Address1_Text	S	Displays the current card's IP address1.
Net_Subnet_Mask1_Text	S	Displays the current card's subnet mask1.
Net_Default_Gateway_Text	S	Displays the current card's default gateway.
Net_Host_Name_Text	S	Displays the current card's hostname.
Layout_List_<1/10>_ls_Selected	D	Indicates that a layout list item is selected.
Layout_List_<1/10>_Text	S	Indicates the current noise reduction setting.
Layout_Selected_To_Edit_Text	S	Displays name of layout currently selected.
Applied_Layout_Text	S	Indicates the currently applied layout being displayed on the output.
Display_Edit_Layout_Page	D	Calls up the display edit layout page that shows a list of windows for the corresponding layout.
Source_List_<1/10>_Is_Selected	D	Indicates that a source list tiem is selected.
Source_List_<1/10>_Text	S	Indicates names of sources in the source list fields.
Source_Edge_Type_Text	S	Displays the edge type of the selected source.
Source_Width_Text	S	Displays the width of the selected source.
Source_Height_Text	S	Displays the height of the selected source.
Source_Refresh_Text	S	Displays the refresh rate of the selected source.
Source_Overlay_Image_Text	S	Displays the overlay image of the selected source.
Window_List_<1/10>_Is_Selected	D	Indicates that a window list item is selected.
Window_List_<1/10>_Text	S	Indicates names of windows in the window list field.
Display_New_Window_Subpage	D	Use to display new window subpage.
Display_Edit_Window_Subpage	D	Use to display edit window subpage.
Select_Window_Position_Text	S	Displays the set window position for new/existing window.
Select_Window_Source_Text	S	Displays the set window source for new/existing window.





Model: Mura MPX Series



Select_Window_Size_Text	S	Displays the set window size for new/existing window.
Window_Position_Text	S	Displays the window list selected position.
Window_Source_Text	S	Displays the window list selected source.
Window_Size_Text	S	Displays the window list selected size.
Window_Overlay_Text	S	Displays the window list selected overlay.
Width_Is_Selected	D	Indicates that the width is selected for adjusting for new window.
Height_Is_Selected	D	Indicates that the height is selected for adjusting for new window.
Position_X_Is_Selected	D	Indicates that the position X is selected for adjusting for new window.
Position_Y_Is_Selected	D	Indicates that the position Y is selected for adjusting for new window.
Display_Keyboard_Page	D	Use to trigger page flip to keyboard page.
Keyboard_Text	S	Displays the current keyboard text.
Keyboard_*	D	Indicates some the keyboard functions being active.

PARAMETERS:		
IP_Address	S	IP address of the Matrox card being controlled.

TESTING:	
OPS USED FOR TESTING:	2-Series: v4.003.0015 3-Series: v1.000.0000
SIMPL WINDOWS USED FOR TESTING:	v3.11.15
DEVICE DB USED FOR TESTING:	v43.05.006.00
CRES DB USED FOR TESTING:	v32.00.001.00
SYMBOL LIBRARY USED FOR TESTING:	v814
SAMPLE PROGRAM:	2-Series: Matrox Mura MPX Series v1.0 Demo PRO2.smw 3-Series: Matrox Mura MPX Series v1.0 Demo MC3.smw
REVISION HISTORY:	v1.0 – Original release.





Model: Mura MPX Series

