


**Partner: McIntosh**  
**Model: MX120**  
**Device Type: Receiver/Processor**


**GENERAL INFORMATION**

<b>SIMPLWINDOWS NAME:</b>	McIntosh MX120
<b>CATEGORY:</b>	Receiver/Processor
<b>VERSION:</b>	1.0
<b>SUMMARY:</b>	Controls all standard functions and provides real-time feedback on a McIntosh MX120.
<b>GENERAL NOTES:</b>	<p>This macro will provide control and feedback for a McIntosh MX120 A/V Control Center. All standard functions can be controlled, and real-time feedback is provided for most functions.</p> <p>This macro has an RS232-ON input. This input should be pulsed on start-up of the system to enable proper 2-way RS232 communications with the McIntosh unit.</p> <p>All controls available for 2 separate zones are included.</p>
<b>CRESTRON HARDWARE REQUIRED:</b>	CNXCOM, ST-COM, C21-COM6, C2COM-2/3
<b>SETUP OF CRESTRON HARDWARE:</b>	RS232 Baud: 9600 Parity: N Data Bits: 8 Stop Bits: 1
<b>VENDOR FIRMWARE:</b>	1.07q
<b>VENDOR SETUP:</b>	None
<b>CABLE DIAGRAM:</b>	CNSP-121

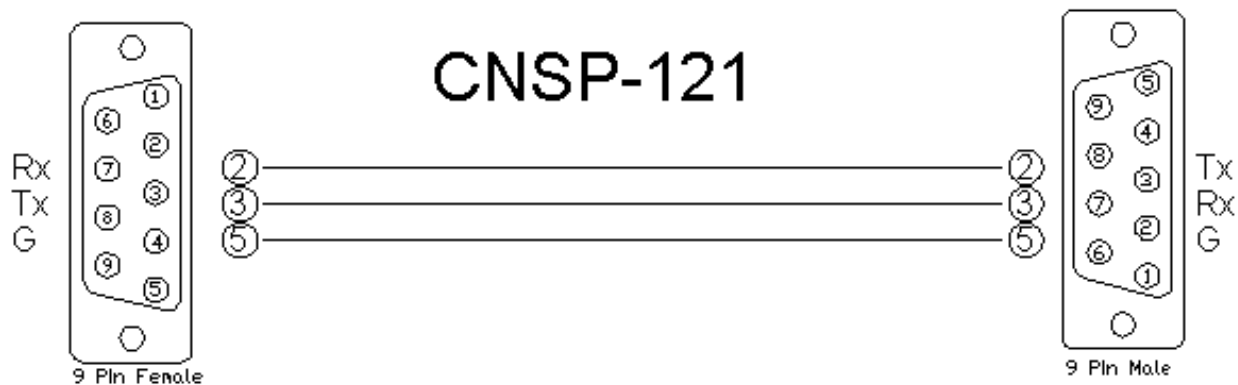

**Partner: McIntosh**  
**Model: MX120**  
**Device Type: Receiver/Processor**

**CONTROL:**

RS232_On/Off	D	Pulse to activate RS232 mode on/off. Should be set to on before sending any other commands.
System_Off	D	Pulse to turn off both zones 1 and 2
Power_On/Off_Zone_*	D	Pulse to turn the desired zone on and off.
*_Zone_*	D	Pulse to select the input for the desired zone.
Volume_Up/Down_Zone_*	D	Press and hold to adjust the volume for the desired zone.
Mute_On/Off/Toggle_Zone_*	D	Pulse to turn the volume mute on and off for the desired zone.
Volume_Bar_Zone_*_In	A	Allows a slider on a touch panel to be used to control the volume level for the desired zone.
Mode_*_Zone_*	D	Pulse to select the current surround mode for the desired zone.
Trim_*_Up/Down_Zone_1	D	Press and hold to adjust the surround speaker outputs, bass and treble for zone 1.
Poll_System	D	Pulse to request the status of the entire McIntosh system. Should only need to be done upon startup of the system.
From_Device\$	S	Serial signal to be routed from a 2-way RS232 port.

**PARAMETERS:**

Volume Repeat Time	P	Indicates how often volume commands will be sent to the McIntosh while the volume is being adjusted. The minimum time should be 0.2s. Unit will <i>not</i> work correctly with a time less than 0.2s.
--------------------	---	---

**Partner: McIntosh**  
**Model: MX120**  
**Device Type: Receiver/Processor**

**FEEDBACK:**

PowerOn/Off_Zone_*_Fb	D	High to indicate the current power state for each zone.
*_Zone_*_Fb	D	High to indicate the currently selected input for each zone.
Mute_On/Off_Zone_*_Fb	D	High to indicate the current volume mute state for each zone.
Volume_Display_Zone_*_\$	S	Serial string data signal indicating the current volume level for each zone.
Volume_Bar_Zone_*	A	Analog signal indicating the volume level in each zone. To be displayed using a bar graph on a touch panel.
Mode_*_Zone_*_Fb	D	High to indicate the currently selected surround mode for each zone.
*_Level_Display_Zone_1\$	S	Serial string data signals indicating the current trim levels.
To_Device\$	S	Serial signal to be routed to a 2 way RS232 port.

**TESTING:**

OPS USED FOR TESTING:	3.155.1240
SIMPL WINDOWS USED FOR TESTING:	2.08.44
CRES DB USED FOR TESTING:	18.9.1
SYMBOL LIBRARY USED FOR TESTING:	508
SAMPLE PROGRAM:	McIntosh MX120 Demo
REVISION HISTORY:	V. 1.0