


Partner: NAD
 Model: T785
 Device Type: AV Surround Receiver



GENERAL INFORMATION

SIMPLWINDOWS NAME:	NAD 785 v1.0
CATEGORY:	Audio Processor
VERSION:	1.0
SUMMARY:	Controls all standard functions and provides true feedback
GENERAL NOTES:	This module will control all of the standard functions on a NAD 785 AV Surround Receiver. The unit provides true feedback. Functions provided include main zone control, zone 1, 2, 3, and 4 controls, menu selection and tuner band/preset selection. Note: XM Tuner controls require Main Power On to function correctly.
CRESTRON HARDWARE REQUIRED:	ST-COM, C2I-COM6, C2COM-2/3
SETUP OF CRESTRON HARDWARE:	RS232 Baud: 9600 Parity: None Data Bits: 8 Stop Bits: 1
VENDOR FIRMWARE:	N/A
VENDOR SETUP:	None
CABLE DIAGRAM:	CNSP-123

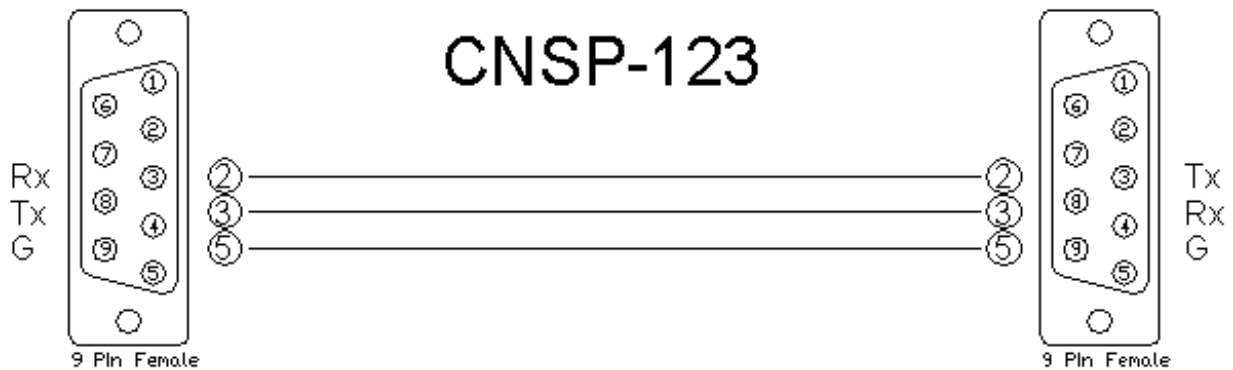

Partner: NAD
Model: T785
Device Type: AV Surround Receiver


CONTROL:

Main_Power_<On/Off/Toggle>	D	Pulse to turn the receiver's main power on and off
Main_Volume_<Up/Down>	D	Press and hold to adjust the main volume
Main_Volume_Mute_<On/Off/Toggle>	D	Pulse to turn the main output volume mute on and off
Main_Input_Source_*	D	Pulse to select the desired source on the main output
Main_Input_Source_Tuner	D	Pulse to select Tuner on the main output
Tuner_Preset_*	D	Pulse to select Tuner Preset number * to the tuner
Tuner_Band_*	D	Pulse to set the tuner mode to *
Tuner_Tune_<+/->	D	Pulse to tune up or down
Tuner_Search_<+/->	D	Pulse to search up or down
Tuner_Digital_Mode_<DAB/XM>	D	Pulse to switch the tuner's digital mode to DAB or XM
Key_*	D	Pulse to send the keypad value *
Menu_<Up/Down/Left/Right>	D	Pulse to move through the menus
Menu_Enter	D	Pulse to select the highlighted menu item
Menu_Display	D	Pulse to send menu Display command
Sleep	D	Pulse to cycle through the sleep timer times
Zone_<2/3/4>_Power_<On/Off/Toggle>	D	Pulse to turn power on and off for zone 2, zone 3 or zone 4
Zone_<2/3/4>_Volume_<Up/Down>	D	Press and hold to adjust the zone 2, zone 3 or zone 4 volume
Zone_<2/3/4>_Volume_Mute_<On/Off/Toggle>	D	Pulse to turn the zone 2, zone 3 or zone 4 volume mute on and off
Zone_<2/3/4>_Input_Source_*	D	Pulse to select the desired source on the zone 2, zone 3 or zone 4 output
Zone_<2/3/4>_Input_Tuner	D	Pulse to select Tuner on the zone 2, zone 3 or zone 4 output
Treble_<Up/Down>	D	Pulse to adjust the treble

Partner: NAD
Model: T785
Device Type: AV Surround Receiver



Bass_<Up/Down>	D	Pulse to adjust the bass
Surround_Trim_<Up/Down>	D	Pulse to adjust the Surround Trim
Center_Trim_<Up/Down>	D	Pulse to adjust the Center Trim
Sub_Trim_<Up/Down>	D	Pulse to adjust the Sub Trim
Surround_Mode_*	D	Pulse to select the desired Surround Mode
Surround_Mode_Analog_*	D	Pulse to select the desired Surround Mode Analog
Surround_Mode_Digital_*	D	Pulse to select the desired Surround Mode Digital
Speaker_<A/B>_<On/Off>	D	Pulse to turn speaker a or b on and off
Main_Trigger_<1/2/3>_Out_Main	D	Pulse to toggle the main zone trigger * on / off
Main_Trigger_<1/2/3>_Out_Zone_2	D	Pulse to toggle the zone 2 trigger * on / off
Main_Trigger_<1/2/3>_Out_Zone_3	D	Pulse to toggle the zone 3 trigger * on / off
Main_Trigger_<1/2/3/4>_Out_Zone_4	D	Pulse to toggle the zone 4 trigger * on / off
Poll Settings	D	Pulse to poll all settings for the receiver once
Poll Enable	D	Hold High to poll all settings for the receiver every 10 seconds
From Device	S	Serial information returned from a 2-way serial port

Partner: NAD
Model: T785
Device Type: AV Surround Receiver


FEEDBACK:

Main_Power_Is_<On/Off>	D	High to indicate current main zone power state
Unit_Is_Initializing	D	High to indicate that the unit is polling for information
Main_Volume_Gauge	A	Analog value indicating the main zone volume level
Main_Volume_Mute_Is_<On/Off>	D	High to indicate the current main zone volume mute state
Main_Input_Is_Source_*	D	High to indicate the currently selected main zone input
Main_Input_Is_Tuner	D	High to indicate that the main zone input is tuner
Tuner_Preset_Is_*	D	High to indicate which tuner preset is selected
Tuner_Band_Is_*	D	High to indicate the currently selected tuner band
Tuner_Text	S	Displays the current tuner station
Tuner_XM_ChannelName_Text	S	Displays the current XM channel name
Tuner_XM_Name_Text	S	Displays the current XM artist name
Tuner_Title_Name	S	Displays the current XM song title
Tuner_DigitalMode_*	D	High to indicate the currently selected tuner digital mode
Tuner_FM_RDS_Name_Text	S	Displays the FM tuner RDS name
Tuner_FM_RDS_Text	S	Displays the FM tuner RDS text information
Direct_Tune_Display_Text	S	Displays the tuner keypad value
Tuner_DAB_DLS_Text	S	Displays the DAB tuner DLS information
Tuner_DAB_Service_Text	S	Displays the DAB text information
Zone_<2/3/4>_Power_Is_<On/Off>	D	High to indicate the current power state for each zone.
Zone_<2/3/4>_Volume_Gauge	A	Analog value indicating the volume level for each zone
Zone_<2/3/4>_Volume_Mute_Is_<On/Off>	D	High to indicate the current volume mute state for each zone
Zone_<2/3/4>_Input_Source_Is_*	D	High to indicate the currently selected input for each zone
Zone_<2/3/4>_Input_Is_Tuner	D	High to indicate that the currently selected input for the zone is the tuner
Source_Name_*_Text	S	Displays the name for source *
Treble_Gauge	A	Displays the current treble level
Bass_Gauge	A	Displays the current Bass level
Surround_Trim_Gauge	A	Displays the current surround trim level
Center_Trim_Gauge	A	Displays the current center trim level

Partner: NAD
Model: T785
Device Type: AV Surround Receiver



Sub_Trim_Gauge	A	Displays the current sub trim level
Sleep_Text	S	Displays the current sleep timer time
Surround_Mode_Is_*	D	High to indicate the currently selected surround mode
Speaker_<A/B>_Is_<On/Off>	D	High to indicate the current state of speaker A and B
Main_Trigger_1_Out_*_Is_On	D	High to indicate that the main trigger * is on
Main_Trigger_2_Out_*_Is_On	D	High to indicate that the main trigger 2 * is on
Main_Trigger_3_Out_*_Is_On	D	High to indicate that the main trigger 3 * is on
To_Device	S	Serial string to receiver

PARAMETER:

Source_*_Name	P	Name for each source
---------------	---	----------------------

TESTING:

OPS USED FOR TESTING:	4.001.1012
SIMPL WINDOWS USED FOR TESTING:	2.12.39
CRES DB USED FOR TESTING:	21.04.015.00
DEVICE DATABASE:	27.01.004.00
SAMPLE PROGRAM:	NAD 785 v1.0 Demo PRO2
REVISION HISTORY:	V. 1.0