


Partner: Pioneer
Model: BDP-09FD & BDP-LX91
Device Type: Blu-Ray Disc Player


GENERAL INFORMATION


| | |
|------------------------------------|---|
| SIMPLWINDOWS NAME: | Pioneer BDP-09FD v1.0 |
| CATEGORY: | Transport Decks |
| VERSION: | 1.0 |
| SUMMARY: | This module provides control and true feedback for the Pioneer BDP-09FD & BDP-LX91 Blu-Ray disc players. |
| GENERAL NOTES: | This module provides control of the Pioneer BDP-09FD. It also provides true feedback. This module was tested with the BDP-09FD. The documentation from Pioneer indicates it should also control the BDP-LX91. |
| CRESTRON HARDWARE REQUIRED: | C2COM-2/3, C2I-COM6, ST-COM, CNXCOM-2 |
| SETUP OF CRESTRON HARDWARE: | RS232 Baud: 115200 Parity: N Data Bits: 8 Stop Bits: 1 |
| VENDOR FIRMWARE: | 2.46 |
| VENDOR SETUP: | None |
| CABLE DIAGRAM: | CNSP-532 |

Rear View of Connector

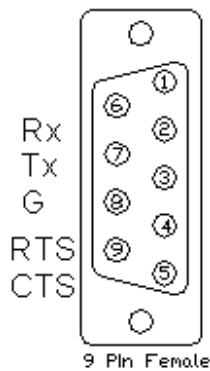

CNSP-532

Rear View of Connector

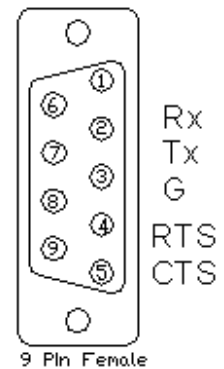
 Rx
 Tx
 G
 RTS
 CTS

 Rx
 Tx
 G
 RTS
 CTS

Partner: Pioneer
Model: BDP-09FD & BDP-LX91
Device Type: Blu-Ray Disc Player


CONTROL:

| | | |
|----------------------------------|---|--|
| Power_<On/Off/Toggle> | D | Pulse to turn the unit on and off. |
| Tray_<Open/Close> | D | Pulse to open and close the disc tray. |
| <Play/Stop/Pause> | D | Pulse to play, stop or pause the disc. |
| <Forward/Reverse>_Scan/Slow/Step | D | Pulse to forward or reverse scan, slow or step. |
| <Next/Previous> | D | Pulse to go to the next or previous chapter or track. |
| Audio | D | Pulse to cycle through the audio settings. |
| Subtitle | D | Pulse to cycle through the subtitle settings. |
| Angle | D | Pulse to cycle through the angle settings. |
| Secondary_<Video/Audio> | D | Pulse to cycle through the secondary video and audio settings. |
| Play_Mode | D | Pulse to display or hide the play menu. |
| Video_Adjust | D | Pulse to display or hide the video adjust menu. |
| Home_Media_Gallery | D | Pulse to display or hide the home media gallery. |
| Top_Menu | D | Pulse to go to the top DVD menu. |
| Home_Menu | D | Pulse to display or hide the home menu. |
| Pop_Up_Menu | D | Pulse to display or hide the pop up menu. |
| <Up/Down/Left/Right> | D | Pulse to move through the menus. |
| Enter | D | Pulse to select the highlighted menu item. |
| Return | D | Pulse to return to the previous menu level. |
| Tools | D | Pulse to display or hide the tools menu. |
| Key_<0...9> | D | Pulse to enter a title, chapter or track number. |
| Clear | D | Pulse to clear the entered digits. |
| Display | D | Pulse to cycle through the on screen information displays. |

Partner: Pioneer
Model: BDP-09FD & BDP-LX91
Device Type: Blu-Ray Disc Player



| | | |
|--|---|---|
| Output_Resolution_<Up/Down> | D | Pulse to step through the output resolution settings. |
| Video_Select | D | Pulse to cycle through the video output settings. |
| Front_Panel_Display_Brightness | D | Pulse to cycle through the front panel display brightness settings. |
| Key_<Blue/Red/Green/Yellow> | D | Pulse to move through the BDMV menus. |
| Poll_Enable | D | Hold high to enable polling. |
| From_Device | S | Serial signal to be routed from a 2-way serial com port. |

FEEDBACK:

| | | |
|---|---|---|
| Loading | D | High to indicate that the disc is loading. |
| Tray_Is_<Open/Closed> | D | High to indicate the current tray state. |
| <Playing/Stopped/Paused> | D | High to indicate the current transport state. |
| <Forward/Reverse>_Scanning | D | High to indicate that the transport is in scanning mode. There are NO separate indications for forward or reverse. |
| <Forward/Reverse>_Slow_Playing | D | High to indicate that the transport is in slow playing mode. There are NO separate indications for forward or reverse. |
| Still_Play_Mode_Is_Active | D | High to indicate that still play mode is active. |
| Title_Number_Value | A | Analog signal indicating the currently playing title. To be displayed using a digital gauge on a touch panel. |
| Title_Number_Text | S | Serial signal indicating the currently playing title. To be displayed using an indirect text field on a touch panel. |
| Chapter_Number_Value | A | Analog signal indicating the currently playing chapter or track. To be displayed using a digital gauge on a touch panel. |
| Chapter_Number_Text | S | Serial signal indicating the currently playing chapter or track. To be displayed using an indirect text field on a touch panel. |
| <Hours/Minutes/Seconds>_Value | A | Analog value indicating the current play time. To be displayed using digital gauges on a touch panel. |
| Time_Text | S | Serial signal indicating the current play time. To be displayed using an indirect text field on a touch panel. |
| To_Device | S | Serial signal to be routed to a 2-way serial com port. |

Partner: Pioneer
Model: BDP-09FD & BDP-LX91
Device Type: Blu-Ray Disc Player

**TESTING:**

| | |
|--|---------------------------------|
| OPS USED FOR TESTING: | 4.001.1012 |
| SIMPL WINDOWS USED FOR TESTING: | 2.11.18 |
| CRESTRON DB USED FOR TESTING: | 20.05.022.00 |
| DEVICE DB USED FOR TESTING: | 21.00.007.00 |
| SAMPLE PROGRAM: | Pioneer BDP-09FD v1.0 Demo PRO2 |
| REVISION HISTORY: | V. 1.0 – Original release. |