 


**Partner: Pioneer**  
**Model: BDP-V6000**  
**Device Type: Blu-Ray Disc Player**



**GENERAL INFORMATION**

<b>SIMPLWINDOWS NAME:</b>	Pioneer BDP-V6000 v1.0
<b>CATEGORY:</b>	Transport Decks
<b>VERSION:</b>	1.0
<b>SUMMARY:</b>	This module provides control and true feedback for the Pioneer BDP-V6000 Blu-Ray disc players.
<b>GENERAL NOTES:</b>	This module provides control of the Pioneer BDP-V6000. It also provides true feedback. NOTE: In order for the set stop marker command to work, the disc must be playing. Per Pioneer protocol document: "This player is designed so that it pauses approximately 1 second before the specified address is reached."
<b>CRESTRON HARDWARE REQUIRED:</b>	C2COM-2/3. C2I-COM6, ST-COM, CNXCOM-2
<b>SETUP OF CRESTRON HARDWARE:</b>	RS232 Baud: 9600 Parity: N Data Bits: 8 Stop Bits: 1
<b>VENDOR FIRMWARE:</b>	4.13
<b>VENDOR SETUP:</b>	None
<b>CABLE DIAGRAM:</b>	CNSP-124

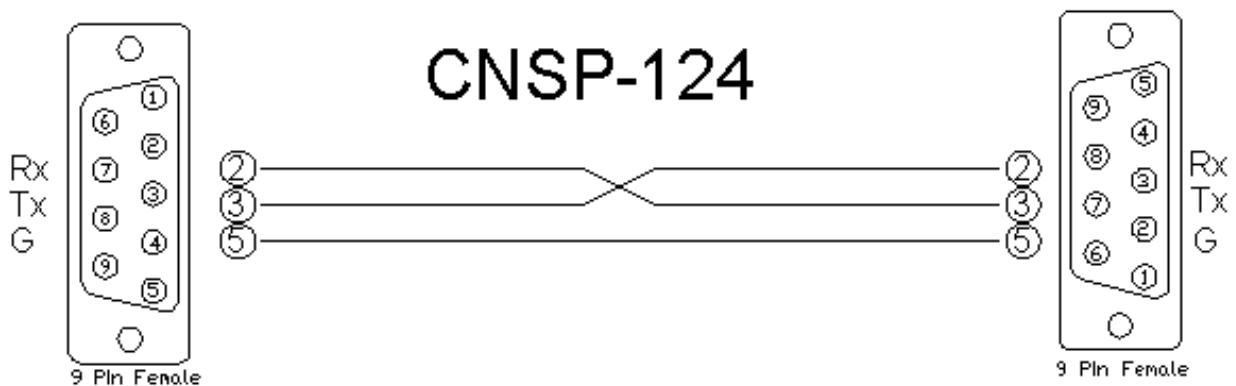

**Partner: Pioneer**  
**Model: BDP-V6000**  
**Device Type: Blu-Ray Disc Player**


**CONTROL:**

Power_<On/Off/Toggle>	D	Pulse to turn the unit on and off.
Tray_<Open/Close>	D	Pulse to open and close the disc tray.
<Play/Stop/Pause>	D	Pulse to play, stop or pause the disc.
<Forward/Reverse>_Scan/Slow/Step	D	Pulse to forward or reverse scan, slow or step.
<Next/Previous>	D	Pulse to go to the next or previous chapter or track.
Audio	D	Pulse to cycle through the audio settings.
Subtitle	D	Pulse to cycle through the subtitle settings.
Angle	D	Pulse to cycle through the angle settings.
Secondary_<Video/Audio>	D	Pulse to cycle through the secondary video and audio settings.
Play_Mode	D	Pulse to display or hide the play menu.
Video_Adjust	D	Pulse to display or hide the video adjust menu.
Home_Media_Gallery	D	Pulse to display or hide the home media gallery.
Top_Menu	D	Pulse to go to the top DVD menu.
Home_Menu	D	Pulse to display or hide the home menu.
Pop_Up_Menu	D	Pulse to display or hide the pop up menu.
<Up/Down/Left/Right>	D	Pulse to move through the menus.
Enter	D	Pulse to select the highlighted menu item.
Return	D	Pulse to return to the previous menu level.
Tools	D	Pulse to display or hide the tools menu.
Key_<0...9>	D	Pulse to enter a title, chapter or track number.
Clear	D	Pulse to clear the entered digits.
Display	D	Pulse to cycle through the on screen information displays.
Output_Resolution_<Up/Down>	D	Pulse to step through the output resolution settings.

**Partner: Pioneer**  
**Model: BDP-V6000**  
**Device Type: Blu-Ray Disc Player**



Video_Select	D	Pulse to cycle through the video output settings.
Front_Panel_Display_Brightness	D	Pulse to cycle through the front panel display brightness settings.
Key_<Blue/Red/Green/Yellow>	D	Pulse to move through the BDMV menus.
Search_Value_In	A	Analog input allowing for the input of preset search values. This is intended to be driven using an Analog Initialize symbol. It is NOT intended to be driven using a Numeric Keypad symbol.
Search_Key_<0...9>	D	Pulse to enter the search string.
Search_Key_Clear	D	Pulse to clear the currently entered search string.
Search_Key_Backspace	D	Pulse to clear the previously entered character in the search string.
Search_Chapter_and_<Pause/Play>	D	Pulse to jump to the chapter entered in the search string and either pause or play.
Search_Title_and_<Pause/Play>	D	Pulse to jump to the title entered in the search string and either pause or play.
Search_Time_and_<Pause/Play>	D	Pulse to jump to the time entered in the search string and either pause or play. To enter the time 1 hour, 23 minutes and 5 seconds enter 12305.
Search_Track_and_<Pause/Play>	D	Pulse to jump to the track entered in the search string and either pause or play.
Set_Stop_Marker_<Chapter/Title/Time/Track>	D	Pulse to set the chapter/title/time/track entered in the search string as the stop marker.
Poll_Enable	D	Hold high to enable polling.
From_Device	S	Serial signal to be routed from a 2-way serial com port.

## FEEDBACK:

Loading	D	High to indicate that the disc is loading.
Tray_Is_<Open/Closed>	D	High to indicate the current tray state.
<Playing/Stopped/Paused>	D	High to indicate the current transport state.
<Forward/Reverse>_Scanning	D	High to indicate that the transport is in scanning mode. There are NO separate indications for forward or reverse.
<Forward/Reverse>_Slow_Playing	D	High to indicate that the transport is in slow playing mode. There are NO separate indications for forward or reverse.
Still_Play_Mode_Is_Active	D	High to indicate that still play mode is active.

**Partner: Pioneer**  
**Model: BDP-V6000**  
**Device Type: Blu-Ray Disc Player**



<b>Title_Number_Value</b>	A	Analog signal indicating the currently playing title. To be displayed using a digital gauge on a touch panel.
<b>Title_Number_Text</b>	S	Serial signal indicating the currently playing title. To be displayed using an indirect text field on a touch panel.
<b>Chapter_Number_Value</b>	A	Analog signal indicating the currently playing chapter or track. To be displayed using a digital gauge on a touch panel.
<b>Chapter_Number_Text</b>	S	Serial signal indicating the currently playing chapter or track. To be displayed using an indirect text field on a touch panel.
<b>&lt;Hours/Minutes/Seconds&gt;_Value</b>	A	Analog value indicating the current play time. To be displayed using digital gauges on a touch panel.
<b>Time_Text</b>	S	Serial signal indicating the current play time. To be displayed using an indirect text field on a touch panel.
<b>Search_Text</b>	S	Serial signal indicating the currently entered search string.
<b>To_Device</b>	S	Serial signal to be routed to a 2-way serial com port.

## TESTING:

<b>OPS USED FOR TESTING:</b>	4.001.1012
<b>SIMPL WINDOWS USED FOR TESTING:</b>	2.11.27
<b>CRESTRON DB USED FOR TESTING:</b>	20.09.002.00
<b>DEVICE DB USED FOR TESTING:</b>	23.08.003.00
<b>SAMPLE PROGRAM:</b>	Pioneer BDP-V6000 v1.0 Demo PRO2
<b>REVISION HISTORY:</b>	V. 1.0 – Original release.