

**SIMPLWINDOWS NAME:** Polycom (PictureTel) iPower Infra-Red Remote Functions

**CATEGORY:** Conferencing

**VERSION:** 1.0

**SUMMARY:** Provides the same functions as the IR remote control

**GENERAL NOTES:** This module is used to emulate the IR remote of a Polycom iPower 900/9000 series codec. Most of the inputs on this module directly correspond to buttons on the Polycom IR remote.

**CRESTRON HARDWARE:** CNXCOM-2  
ST-COM

**SETUP OF CRESTRON HARDWARE:** Baud Rate - 9600  
Parity - Odd  
Data Bits - 8  
Stop Bits - 1

**VENDOR FIRMWARE:** iPower 900 Series - 4.0.2.520  
iPower 9000 Series - 4.2.0.1009

**VENDOR SETUP:** The Polycom system has 2 DB-9 serial ports. YOU MUST USE PORT 1 TO COMMUNICATE FROM CRESTRON TO POLYCOM.

Also, you must enable external control as follows:

1. Using the Start Menu, select Programs > Polycom iPower > Administrator Information > Admin Tools
2. Select "Utilities" from the Category list
3. Select the Custom Control tab
4. Check the box to enable control from an external control system
5. Press OK, and restart the Collaboration software

**CABLE NUMBER:** CNSP-124

## CONTROL:

<b>REMOTE-HELP</b>	D	Toggles the help menu on/off
<b>REMOTE-STANDBY</b>	D	Toggles the PictureTel standby mode
<b>REMOTE-OPTIONS</b>	D	Toggles the options menu on/off
<b>REMOTE-CALL/ANSWER</b>	D	Brings up the dialing menu
<b>REMOTE-0-9,*,#</b>	D	Send numeric digit 0-9, * AND # of keypad
<b>REMOTE-SET</b>	D	Used to set a camera preset need to press a number after
<b>REMOTE-CANCEL</b>	D	Send keypad cancel (X)
<b>REMOTE-PRESET</b>	D	Used to recall a camera preset need to press a number after
<b>REMOTE-UP</b>	D	Send keypad up arrow
<b>REMOTE-LEFT</b>	D	Send keypad left arrow
<b>REMOTE-ENTER</b>	D	Send keypad enter
<b>REMOTE-RIGHT</b>	D	Send keypad right arrow
<b>REMOTE-DOWN</b>	D	Send keypad down arrow
<b>REMOTE-PEOPLE</b>	D	Used to access the people source menu
<b>REMOTE-CONTENT</b>	D	Used to access the content source menu
<b>REMOTE-PIP</b>	D	Toggles the picture_in_picture feature
<b>REMOTE-VOL-UP</b>	D	Increases the volume

<b>REMOTE-VOL-DOWN</b>	D	Decreases the volume
<b>REMOTE-MIC-MUTE</b>	D	Toggles the mute state of the local microphones
<b>REMOTE-ZOOM-IN</b>	D	Zooms in for the currently selected camera
<b>REMOTE-ZOOM-OUT</b>	D	Zooms out for the currently selected camera
<b>REMOTE-AUTO-CAM-POINT</b>	D	Toggles the state of the auto camera point

## FEEDBACK:

<b>To_Device\$</b>	S	Serial data string to be routed to a 2-way RS232 port
--------------------	---	---

## OPS USED FOR TESTING:

v3.029.cuz  
5.12.63x.upz

## COMPILER USED FOR TESTING:

SimplWindows Ver 2.03.18

## SAMPLE PROGRAM:

Polycom iPower Demo

8/24/2001 -- version 2.0 fixed a timing issue for version 2.0 of the Ptel iPower protocol.

2/11/2002 -- version 3.0 completed testing with version 3.0 of the Ptel iPower protocol.

## REVISION HISTORY:

8/16/2002 -- version 4.0 completed testing with version 4.0 of the Ptel iPower protocol, and added Virtual Serial symbol

3/13/2003 -- Tested with iPower 9000. Renamed series to "iPower"