

Partner: Polycom
 Model: SoundStructure
 Device Type: DSP




GENERAL INFORMATION

SIMPLWINDOWS NAME:	Polycom SoundStructure Input Advanced Control v2.1
CATEGORY:	Conferencing
VERSION:	2.1
SUMMARY:	This module will control an input on the Polycom SoundStructure.
GENERAL NOTES:	<p>This module will control an input on the Polycom SoundStructure. The Virtual_Name_Out\$ must be connected to one of the Virtual_Name_In_*\$ inputs on the feedback processor module. The From_Processor\$ input must be connected from the corresponding To_Virtual_Name_*\$_Module\$ output. For this module to work, the Initialize input on the Feedback Processor module must be pulsed. Once the initialization is complete, the module should work and provide true feedback. The Level and Fader correspond to the Level and Fader controls for the input when using the Polycom SoundStructure software.</p> <p>NOTE: If using this module to control a group, the feedback on this module may not reflect true feedback. This would happen if you muted the group and then unmuted the inputs individually, one at a time, until all inputs in the group were unmuted. In this situation. The group control module would still show muted. This due to the fact that the Polycom does not tell us that a group has changed unless that group is specifically controlled. The same thing applies to the level and fader as well.</p> <p>NOTE: POLYCOM RECOMMENDS END-USER VOLUME ADJUSTMENTS TO INPUTS AND OUTPUTS SHOULD BE PERFORMED WITH THE FADER CONTROLS AS SHOWN IN THE BASIC MODULE.</p> <p>INPUT AND OUTPUT GAIN CONTROLS FOUND ON THE ADVANCED MODULE SHOULD ONLY BE USED TO SET THE APPROPRIATE GAIN OR ATTENUATION REQUIRED TO BE COMPATIBLE WITH THE ELECTRICAL SIGNAL LEVELS COMING FROM ANY EXTERNAL EQUIPMENT (SUCH AS MICROPHONES, AMPLIFIERS, ETC.) THAT ARE CONNECTED TO THE SOUNDSTRUCTURE DEVICE. THE INPUT AND OUTPUT GAINS SHOULD BE SET DURING THE ROOM INSTALL PROCESS USING THE SOUNDSTRUCTURE STUDIO DESIGN SOFTWARE THAT IS SHIPPED WITH THE PRODUCT AND AVAILABLE FROM POLYCOM'S WEBSITE.</p> <p>END-USER ADJUSTMENTS OF THE INPUT AND OUTPUT GAIN SETTINGS AFTER INSTALLATION ARE NOT REQUIRED.</p>
CRESTRON HARDWARE REQUIRED:	C2I-COM6, C2COM-2/3, C2ENET-1/2, C2I-MC3-COM2-232, C2I-MC3ENET-1
SETUP OF CRESTRON HARDWARE:	<p>RS232</p> <p>Baud: 9600</p> <p>Parity: None</p> <p>Data Bits: 8</p> <p>Stop Bits: 1</p> <p>TCP/IP:</p> <p>Port: 52774</p>
VENDOR FIRMWARE:	1.6.0-Beta2

Partner: Polycom
 Model: SoundStructure
 Device Type: DSP



VENDOR SETUP:	The Polycom SoundStructure must have a program loaded. The virtual channel names from that program must be entered in the parameter fields on the control modules.
CABLE DIAGRAM:	CNSP-121

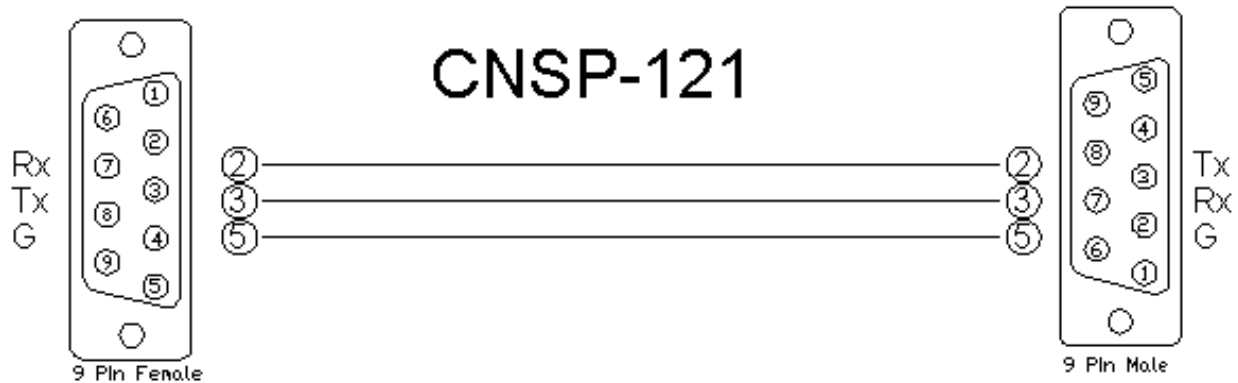

CONTROL:		
Level_Up/Down	D	Press and hold to adjust the level.
Level_Value_In	A	Analog input to allow preset values to be sent to the Polycom SoundStructure. These values must be in the range set by the maximum and minimum parameters. They would generally come from a symbol like the Analog Initialize. These cannot come from a slider on a touch panel. Valid range is -20d to 64d. This input may be commented out if you do not wish to use presets from inside the Crestron.
Mute_On/Off/Toggle	D	Pulse to turn the mute on and off.
Fader_Up/Down	D	Press and hold to adjust the fader.
Fader_Value_In	A	Analog input to allow preset values to be sent to the Polycom SoundStructure. These values must be in the range set by the maximum and minimum parameters. They would generally come from a symbol like the Analog Initialize. These cannot come from a slider on a touch panel. Valid range is -100d to 20d. This input may be commented out if you do not wish to use presets from inside the Crestron.
From_Processor\$	S	Serial signal to be routed from a To_Virtual_*_Module\$ output on the feedback processor module.

Partner: Polycom
Model: SoundStructure
Device Type: DSP

**PARAMETER:**

Input Virtual Name	P	Input name entered in the Polycom SoundStructure software for the output you want to control.
Maximum Level	P	Maximum value for the level. The range for level is -20d to 64d. That means the range for maximum is -19d to 64d. Default is 4d.
Minimum Level	P	Minimum value for the level. The range for level is -20d to 64d. That means the range for minimum is -20d to 3d. Default is -20d.

FEEDBACK:

Level_Bar	A	Analog value indicating the current level value. To be displayed using a bar graph on a touch panel.
Mute_On/Off_Fb	D	High to indicate the current mute state.
Fader_Bar	A	Analog value indicating the current fader value. To be displayed using a bar graph on a touch panel.
Virtual_Name_Out\$	S	Serial signal to be routed to one of the Virtual_Name_In_*\$ inputs on the feedback processor module.
To_Device\$	S	Serial signal to be routed to a 2-way serial com port or a TCP/IP Client.

Partner: Polycom
Model: SoundStructure
Device Type: DSP



TESTING:	
OPS USED FOR TESTING:	PRO2: 4.003.0015 MC3: 1.003.0008
SIMPL WINDOWS USED FOR TESTING:	4.03.20
DEVICE DB USED FOR TESTING:	73.05.002.00
CRES DB USED FOR TESTING:	55.00.011.00
SYMBOL LIBRARY USED FOR TESTING:	985
SAMPLE PROGRAM:	Polycom SoundStructure v2.1 Demo
REVISION HISTORY:	<p>V. 1.0 – Original Release</p> <p>V. 1.1 – Added level maximum and minimum feedback from the Polycom. These values are used to adjust the scale of the bar graph and prevent ramping beyond these points. Removed the maximum and minimum parameter fields on the module.</p> <p>V. 1.2 – Created separate basic and advanced controls. The basic controls do not offer control of the Level. Polycom recommends using the basic modules to control the SoundStructure.</p> <p>V. 2.0 – Now 3-Series compatible. Improved performance by reducing extraneous find() calls. Added logic to handle virtual names containing double quote characters by escaping them with a backslash.</p> <p>V. 2.1 – Incorporated 3-series best practices as needed in all Simpl+.</p>