





GENERAL INFORMATION SIMPLWINDOWS NAME: Renkus Heinz Dante Enabled Loudspeakers Aux v1.0 CATEGORY: Loudspeakers **VERSION:** 1.0 This module works in conjunction with Renkus Heinz Dante Enabled Loudspeakers SUMMARY: Command Processor v1.0 to report the status of an Aux unit The protocol supports up to 3 aux devices using index's 1-3. To get the data of an **GENERAL NOTES:** aux unit, you will set the Aux ID for the respective Aux unit. **CRESTRON HARDWARE REQUIRED:** 4 Series Control Processors **VENDOR FIRMWARE:** 4.0.62







FEEDBACK:		
Is_Initialized	D	Set to high when all registered control modules have successfully indicated that they have received the required responses to all their queries.
MAC_Fb	S	Indicates the MAC address for the Aux device.
MCU_FW_Version_Fb	D	Indicates the MCUFW version for the Aux device.
Serial_Number_Fb	S	Indicates the Serial number for the Aux device.
Amp_Error_Fb	D	Indicates a Amp Error.
Power_Supply_Temp_Status_Fb	D	Indicates the master power supply temp is high
Positive3_3V_Bad_Fb	D	Indicates a 3.3V issue.
Negative_12V_Bad_Fb	D	Indicates a -12V issue.
Positive1_8V_Bad _Fb	D	Indicates a 1.8V issue.
Positive12V_Bad_Fb	D	Indicates a 12V issue.
Positive5V_Bad _Fb	D	Indicates a 5V issue.







PARAMETERS:		
Command_Processor_ID	Α	Setting to indicate the ID for a particular processing module. Up to 10 separate processing modules may be used in a single program, each one operating independently. Note that if multiple processing modules are to be used in a single program, they <u>must</u> each have different ID's set.
Aux ID	S	Setting to indicate the Aux ID component reported by Renkux Heinz. There is a range of 0-3 unique id's available







TESTING:			
OPS USED FOR TESTING:	CP4 2.8003.00056		
SIMPL WINDOWS USED FOR TESTING:	4.3		
CRES DB USED FOR TESTING:	226.0500.003.00		
DEVICE DATABASE:	200.36000.001.00		
SYMBOL LIBRARY USED FOR TESTING:	1207		
SAMPLE PROGRAM:	Renkus Heinz Iconyx v1.0 Demo		
REVISION HISTORY:	v1.0 – Initial Release		