

**SIMPLWINDOWS NAME:** Rotel RSX-1065

**CATEGORY:** Surround Sound Receiver

**VERSION:** 1.0

**SUMMARY:** Controls all standard functions and provides true feedback

**GENERAL NOTES:** This module will control all of the standard functions on a Rotel-1065 Surround Sound Receiver. True feedback for some functions is provided by the receiver. Functions provided include main zone control, as well as zone and record zone source selection, surround mode selection, surround speaker level adjustments, and tuner preset selection. True feedback emulating the display on the front of the Rotel unit is provided. This displays almost all settings of the unit. Separate discrete feedback is provided for the Main/Zone source selection, the record zone source selection, and the main zone volume level.

Note that for surround mode selection, certain selections are only valid while certain sources are selected. So choosing a particular surround mode may actually cause a slightly different mode to be activated on the Rotel system. However, since true feedback is provided, the actual surround mode currently active will be reflected on the output of this module. Also note that some functions for multi-zone and record zones are not valid at all times.

**CRESTRON HARDWARE:** CNCOMH-2  
CNXCOM  
ST-COM  
C2-COM

**SETUP OF CRESTRON HARDWARE:** Baud Rate - 19200  
Parity - None  
Data Bits - 8  
Stop Bits - 1

**VENDOR FIRMWARE:** None

**VENDOR SETUP:** None

**CABLE NUMBER:** CNSP-636

## CONTROL:

<b>POWER_ON/OFF</b>	D	Power the unit on/off
<b>MAIN_VOLUME_UP/DOWN/MUTE</b>	D	Adjust the volume level in the main/zone area
<b>Main/Zone_*</b>	D	Select the source to be heard in the main/zone area
<b>Record_*</b>	D	Select the source for the record zone
<b>SURROUND_MODES</b>	D	Select the surround mode for the main area
<b>SPEAKER_LEVEL_ADJUSTMENTS</b>	D	Adjust the speaker levels for each of the surround speakers
<b>ZONE</b>	D	Puts the unit into "zone" mode which allows source selection and volume adjustments for the zone area
<b>TUNER_PRESET_UP/DOWN</b>	D	Step through the tuner presets sequentially
<b>TUNER_PRESET_*</b>	D	Discretely select any tuner preset

**FROM\_DEVICE\$** S Serial signal to be routed from a 2-way RS232 port

## **FEEDBACK:**

**Main\_Volume\_Level** A Indicates the volume level of the main area

**Main\_Active** D Indicates that the main area is active for source selection and volume adjustments

**Zone\_Active** D Indicates that the zone area is active for source selection and volume adjustments

**Main/Zone\_\*\_Fb** D True feedback indicating the source currently selected for the main or zone area...whichever is active

**Record\_\*\_Fb** D True feedback indicating the source currently selected for the record area

**Text\_Line\_1\$** S Serial string containing the text displayed on the first line of the display

**Text\_Line\_2\$** S Serial string containing the text displayed on the second line of the display

**\*\_FB** D Directly emulates all of the LED feedback indicators on the front display of the Rotel unit

**To\_Device\$** S Serial signal to be routed to a 2-way RS232 port.

**OPS USED FOR TESTING:** 5.12.63x.upz, v2.004.cuz

**COMPILER USED FOR TESTING:** SimplWindows Ver 2.02.11

**SAMPLE PROGRAM:** Rotel RSX-1065 Demo

**REVISION HISTORY:** None