




Partner: Runco

Model:CR-26HD + CR-32HD + CR-40HD

Device Type: Video Projector



GENERAL INFORMATION			
SIMPLWINDOWS NAME:	Runco CR-26HD + CR-32HD + CR-40HD v2		
CATEGORY:	TV/Video Projector		
VERSION:	2.0		
SUMMARY:	This module provides RS232 control and true feedback for the Runco CR-26HD + CR-32HD + CR-40HD LCD panels.		
GENERAL NOTES:	This module provides RS232 control for the Runco CR-26HD + CR-32HD + CR-40HD LCD Panels. It also provides true unsolicited feedback. There are no status queries as of yet. NOTE: The Runco CR-26HD + CR-32HD + CR-40HD provides only automatic feedback, and does not provide status query feedback.		
CRESTRON HARDWARE REQUIRED:	CNXCOM-6, CNXCOM-2, ST-COM, C2COMI, C2COM-2/3		
SETUP OF CRESTRON HARDWARE:	RS232 Baud: 115200 Parity: None Data Bits: 8 Stop Bits: 1		
VENDOR FIRMWARE:	N/A		
VENDOR SETUP:	None		
CABLE DIAGRAM:	CNSP-124		

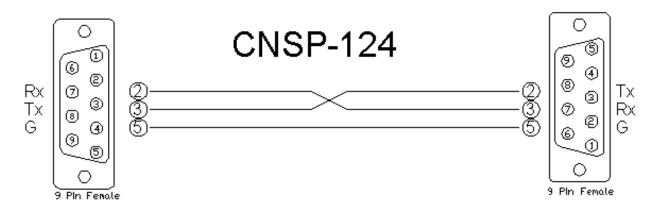





Partner: Runco

Model:CR-26HD + CR-32HD + CR-40HD

Device Type: Video Projector



CONTROL:		
Power_On/Off/Toggle	D	Pulse to turn the LCD Panel on and off.
Input_*	D	Pulse to select the desired input.
Aspect_Ratio	D	Pulse to select the desired aspect ratio.
Image_Preset_*	D	Pulse to select the desired image preset.
Menu	D	Pulse to turn the on-screen menu on and off.
Up/Down/Left/Right	D	Pulse to move through the on-screen menus.
Enter	D	Pulse to select an item in the on-screen menu.
Exit	D	Pulse to escape an item in the on-screen menu.
PIP_*	D	Pulse to adjust PIP commands.
Volume_Up/Down	D	Press and hold to adjust the volume 000-100.
Channel_Up/Down	D	Press and hold to adjust the TV channels.
Mute	D	Pulse to adjust mute commands.
Caption_On/Off	D	Pulse to adjust caption commands.
Source_*	D	Pulse to adjust source for different inputs commands.
Key_*	D	Pulse to emulate the IR key commands.
Fav_Channel_*	D	Pulse to switch between 4 preset favorite channels
From_Device\$	S	Serial signal to be routed from a 2-way serial com port.





Partner: Runco

Model:CR-26HD + CR-32HD + CR-40HD

Device Type: Video Projector



FEEDBACK:		
Power_On/Off_Fb	D	High to indicate the current power state.
Input_*_Fb	D	High to indicate the currently selected input.
Aspect_Ratio_*_Fb	D	High to indicate the currently selected aspect ratio.
Source_*_Fb	D	High to indicate the currently selected source.
Image_Preset_*_Fb	D	High to indicate the currently selected image preset.
PIP_*_Fb	D	High to indicate the currently selected PIP state.
Picture_Mode_*_Fb	D	High to indicate the currently selected picture mode state.
Caption_On/Off_Fb	D	High to indicate the currently selected caption state.
Fav_Channel_*_Fb	D	High to indicate the currently selected favorite channel 1-4 state.
Channel	Α	Analog value indicating channel.
Volume	Α	Analog value indicating volume.
Message\$	S	Serial string displaying command validation.
To_Device\$	S	Serial signal to be routed to a 2-way serial com port.

TESTING:	
OPS USED FOR TESTING:	3.155_1143
SIMPL WINDOWS USED FOR TESTING:	2.08.38
CRES DB USED FOR TESTING:	18.7.8
SYMBOL LIBRARY USED FOR TESTING:	472
SAMPLE PROGRAM:	Runco CR-26HD + CR-32HD + CR-40HD Demo PRO2
REVISION HISTORY:	V. 2.0 – Original Release.