SENNHEISER MOBILE CONNECT

MODULE HELP FILE

Sennheiser Streaming Technologies GmbH, AV clients (Crestron)







SENNHEISER MOBILECONNECT V2_2_0 MODULE HELP

Module name	SennheiserMobileConnect v2_2_0.umc, SennheiserMobileConnect2.2.0.usp, MobileConnect.clz		
Version	2.2.0		
Description	This document defines the common Crestron module interface for the Sennheiser Mobile Connectunits.		
Maintainer	Sennheiser		
Parameters	IP_Hostname, Serial IP address or hostname of the cloud service being used to host the devices.		
	API_Token, Serial API Token created in cloud software to give access rights to a user.		
	API_Version, Serial API version of command set to use. Notice, using an older version may create issues with some commands internally		
	Integration_Mode, Integer 0 for a Standalone system, 1 for a Managed system.		
	Authentication, Serial SSL on or off for the crestron processor.		
	Username, Serial Username for the Crestron processor/VC4		
	Password, Serial Password for the Crestron processor/VC4		
	QRCodeld, Serial ID for the folder that will be created to house the QR Code image.		
	VC4_RoomID, Serial		

	ID for the room created in VC4.If not using VC4 use 2 double quotes "".
Inputs	Poll, Digital Pulse to update the Station List. If a station is already selected, will also update Channel List. If a channel is already selected will also update Channel Details
	Station List Get_Station_List, Digital Pulse to retrieve or update the list of available stations on the manager.
	Select_Station[X], Digital Pulse to select specified Station from list.
	Set_Station, Serial Text field used to directly select a station.
	Channel List Select_Channel[X], Digital Pulse to select specified Channel from list.
	Set_Channel, Serial Text field used to directly select a channel.
	Channel Details Change_Channel_Name, Digital Pulse to change the channel name.
	Channel_New_Name, Serial Text field used when changing the Name of the channel.
	Channel_Enabled, Digital Pulse to Enable/Disable the channel.
	Channel_Hidden, Digital Pulse to Show/Hide the channel.
	Channel_Mic_Muted, Digital Pulse to Mute/Unmute the mic.
	Speaker_Queue_Enable, Digital Pulse to Enable/Disable the mic queue.
	Speaker_Queue_Next, Digital Pulse to move the the next mic in the queue.
	Speaker_Queue_Clear, Digital Pulse to clear the mic queue.
	Channel_PinSecure, Digital Pulse to Enable/Disable the Pin code for the channel.
	Re-Generate_Channel_Access, Digital Pulse to Re-Generate the channel access details, PinCode and QR picture.
	Change_Channel_Pin, Digital Pulse to change the pincode.
	Channel_New_Pincode, Serial Text field used when changing the PinCode of the channel.
	Error
	Hide_Error_Popup, Digital Pulse to dismiss the Error Popup.
Outputs	***Station List*** Number_Of_Stations, Analog

Displays thetotal number of stations retrieved.

Select Station Fb[X], Digital

Will go high when specified Station is selected from list.

Station Name[X], Serial

Displays a list of stations names.

ChannelList

Number Of Channels, Analog

Displays the total number of channels retrieved.

Select Channel Fb[X], Digital

Will go high when specified Channel is selected from list.

Channel Name[X], Serial

Displays a list of channel names.

Channel Details

Active Channel, Analog

Displays thecurrently selected channel number.

Channel Name, Serial

Displays the active channelname in serial form.

Channel ID, Serial

Displays the active channel IDin serial form.

Channel_Enabled_Show, Digital

Will go High if supported by the selected API Version.

Channel Enabled Fb, Digital

Will go High if the channel is enabled.

Channel Hidden Show, Digital

Will go High if supported by the selected API Version.

Channel Hidden Fb, Digital

Will go High if the channel is hidden.

Channel_StreamAvailable_Show, Digital

Will go High if supported by the selected API Version.

Channel_StreamAvailable_Fb, Digital

Will go High if the channel has a stream available.

Channel_Mic_Enabled_Show, Digital

Will go High if supported by the selected API Version.

Channel_Mic_Enabled_Fb, Digital

Will go High if the channel mic is enabled.

Channel Mic Muted Show, Digital

Will go High if supported by the selected API Version.

Channel Mic Muted Fb, Digital

Will go High if the channels mic is muted.

Speaker_Queue_Show, Digital

Will go High if supported by the selected API Version.

Speaker Queue Enable Fb, Digital

Will go High if the speaker queue is enabled.

Audience Mic Speaker Queue, Analog

Shows the current number of speakers in the queue.

Channel_PinSecure_Show, Digital

Will go High if supported by the selected API Version.

Channel PinSecure Fb, Digital

Will go High if the channels pincode is enabled.

Channel Pincode, Serial

Displays the active channelPincode in serial form.
Channel_QR_Code, Serial Displays a link to the html folder on the processor hosting the image of the QR Code.
Error Show_Error_Popup, Digital Will go High if there is an error to display.
Error, Serial Active received error from system.

Version History	Version	Date	Remarks		
	1.00.00	211214	Initial structure.		
	1.00.01	211217	Added Error code output		
	2.00.00	240222	Added logic for speaker queue and extra logic based on		
			API version number and integration mode.		
	2.01.00	240808	Added strings for direct Station and Channel select		
	2.02.00	250314	Added ability to use on VC4 system		
Advisories/					
remarks					
Dependencies	MobileConnect.clz				
Processor	2-Series, not currently supported.				
support	3-Series, support. 4-Series, support. VC4 support.				