

Partner: Somfy
Model: UAI+
Device Type: Shade/Motor Control



GENERAL INFORMATION

SIMPLWINDOWS NAME:	Somfy UAI+ v1.6 Endpoint Control (Limited)
CATEGORY:	Shades/Drapes
VERSION:	1.6
SUMMARY:	This module provides control functionality for an endpoint (single or group of motors) connected to a Somfy UAI+.
GENERAL NOTES:	<p>This is a standalone “component” module allowing for controlling a single motor or a group of motors, referred to in this document as an “endpoint”.</p> <p>This module requires an instance of the primary “Somfy UAI+ v1.6 Command Processor” communication module be included in the program. Control for this “component” module will be bound to and flow through the primary Comm module.</p> <p>Important Note: It has been discovered that not all motors that are controllable via the UAI+ also support requesting position feedback. This module will control a single motor or group of motors that <u>do not</u> allow for querying feedback. As such, the module does not provide any feedback related to the current position of the motor. If you have a motor that does support position queries, please use the Endpoint Control module, which will allow for control of a motor and supports feedback. If you are unsure if your motor supports feedback, turn on the “Enable_Debug” signal on the command processor and watch the trace statements in Debugger. If the motor does not support feedback, you will see a JSON error response come in after a request for position query.</p>
CRESTRON HARDWARE REQUIRED:	Crestron 3-Series or 4-series processor.
SETUP OF CRESTRON HARDWARE:	This module requires the “Somfy UAI+ v1.6 Command Processor” module in order to operate. Please read the help file associated with that module for additional information.
VENDOR FIRMWARE:	N/A
VENDOR SETUP:	N/A

Partner: Somfy
Model: UAI+
Device Type: Shade/Motor Control

**PARAMETER:**

Command_Processor_ID	Setting to indicate the instance of a particular UAI+ Comm module that this "component" module will be linked to. Up to 100 separate UAI+ Comm modules may be used in a single program, each one operating independently. This parameter is used to assign this particular component module to a specific UAI+.
Endpoint_Type	Setting to indicate the type of endpoint to be controlled, either a Single motor or a Group of motors.
Device_ID	Setting to indicate the Device ID of the endpoint. The meaning of this parameter will differ depending on the Endpoint_Type selected. If EndPoint_Type is Single, this will be the Device ID for the single motor you would like to control. If the Endpoint_Type is Group, this will be the Device ID for the single motor in your group to use for status feedback. Important Note: this parameter needs to be entered without any periods that might be listed in the integration report. For example, if the device ID is listed as AA.BB.CC (with periods), the parameter should be entered as AABBC (no periods).
Group_ID	Setting to indicate the Group ID to control. This value is only relevant if Endpoint_Type selected is Group. If Endpoint_Type is Single, double quotes ("") should be used in this field. Important Note: this parameter needs to be entered without any periods that might be listed in the integration report. For example, if the group ID is listed as 01.01.01 (with periods), the parameter should be entered as 010101 (no periods).

Partner: Somfy
Model: UAI+
Device Type: Shade/Motor Control

**CONTROL:**

Move_Up	D	Pulse to move the endpoint up.
Move_Down	D	Pulse to move the endpoint down.
Move_Stop	D	Pulse to stop the movement of the endpoint.
Move_To	D	Set the absolute position of the motor between 0 (fully up) and 100 (fully down).
Move_IP_Next	D	Pulse to move to the next pre-defined "intermediate" position. Note, intermediate positions can only be recalled from this module. Actual set up of intermediate positions to be performed using the UAI+ software or webpage.
Move_IP_Prev	D	Pulse to move to the previous pre-defined "intermediate" position. Note, intermediate positions can only be recalled from this module. Actual set up of intermediate positions to be performed using the UAI+ software or webpage.
Move_IP	A	Pulse to recall a specific pre-defined "intermediate" position. Note, intermediate positions can only be recalled from this module. Actual set up of intermediate positions to be performed using the UAI+ software or webpage.

Partner: Somfy
Model: UAI+
Device Type: Shade/Motor Control

**FEEDBACK:**

Motor_Is_Initialized	D	High to indicate that the module state is currently in sync with the state of the endpoint. As this module does not support position feedback, this signal will always be high.
-----------------------------	---	---

Partner: Somfy
Model: UAI+
Device Type: Shade/Motor Control

**TESTING:**

OPS USED FOR TESTING: CP3: 1.8000.4522.24170

SIMPL WINDOWS USED FOR TESTING: 4.1600.03

CRES DB USED FOR TESTING: 206.0500.004.00

DEVICE DATABASE: 200.9000.002.00

SYMBOL LIBRARY USED FOR TESTING: 1143

SAMPLE PROGRAM: Somfy UAI+ v1.6 Demo IP/RS232 CP3

REVISION HISTORY:

- v1.0 – Initial Release
- v1.1 – fixed SIMPL# namespace/naming issue to allow for using UAI+ modules with myLink modules in same program
- v1.2 – added new Endpoint Component (Limited).
- v1.3 – updated Newtonsoft due to database 200 compatibility issues
- v1.4 – fix issue with unsolicited response processing
- v1.5 – update underlying Comm for Crestron Home support
- v1.6 – Improvements to command processing