



Manufacturer: World Wide Programming B.V.
Model: WWP Panel Rooms v1.0
Device Type: Software module - WWP Home Config

CONTACT SUPPORT: (please fill out carefully)

COMPANY NAME:	World Wide Programming B.V.
SUPPORT CONTACT:	Leonel Geagea
EMAIL ADDRESS:	info@worldwideprogramming.nl
PHONE:	+31 6 1512 5959
ADDRESS:	Rotterdam, the Netherlands
NOTES:	Website: https://www.worldwideprogramming.nl . Support in English and Dutch; please include the processor model, firmware and the Status / License_Status text of WWP Core.

GENERAL INFORMATION

SIMPLWINDOWS NAME:	WWP Panel Rooms v1.0
CATEGORY:	User Interface
VERSION:	1.0
SUMMARY:	Room routing for one touch panel (contract smart object RoomSelect). The panel selects a room; WWP Home Config routes that room to all WWP Panel modules of the panel and reports which systems each room has (icons on the floor plan), the room names and the buildings.
GENERAL NOTES:	One instance per touch panel. All WWP Panel modules of one panel share the same Panel_Number; the room that panel is routed to (WWP Panel Rooms) decides what this module shows. Signal names follow the WWP Panel UI contract (CH5), so the module can be wired straight to the panel smart object. Panel_Online selects the default room of the panel after a reboot. Room_Name[n] are the names from the configuration (empty = name built into the panel). Smart object on the WWP Panel UI: RoomSelect. Requirements: WWP Core (once per program) and the SIMPL# library WwpConfig.clz in the same folder as the program. All WWP modules communicate with each other inside the processor; no extra wiring between modules is needed. Start-up: the module does not send any commands to devices at boot. After the configuration is loaded it only publishes the current state (names, visibility, feedback) so panels and logic are correct straight away.



Manufacturer: World Wide Programming B.V.
 Model: WWP Panel Rooms v1.0
 Device Type: Software module - WWP Home Config

	Licensing: part of the commercial WWP Home Config package (licenses S / M / L, 7-day trial per processor). See "WWP Home Config v1.0 Help.pdf" for the complete system description.
CRESTRON HARDWARE REQUIRED:	4-Series control system (developed and tested on RMC4). 3-Series is not supported.
SETUP OF CRESTRON HARDWARE:	4-Series control system. Copy WwpConfig.clz next to the .smw program, add WWP Core once, then add the WWP modules you need. Load the program, open the web configuration (http://<processor-ip>:8090/) and enter the rooms, devices and panels.
VENDOR FIRMWARE:	N/A - software module (no third-party device).
VENDOR SETUP:	In the web configuration: Rooms (number 001-100, name, floor), Panels (default room, buildings) and Buildings.
CABLE DIAGRAM:	N/A - logic module, no device connection.

CONTROL:

<u>Signal/Function Name</u>	<u>D,S,A</u> <u>Digital, Serial, Analog</u> <u>signal property - description</u>
Panel_Online	D Online feedback of the touch panel. Rising edge selects the default room of the panel.
Room_Select[1-100]	D From RoomSelect.RoomNNN_Select: route room n to this panel.

FEEDBACK:

Room_Selected_Fb[1-100]	D To RoomSelect.RoomNNN_Selected_Fb: high = room n is routed to this panel.
Room_LightsOn_Fb[1-100]	D To RoomSelect.RoomNNN_LightsOn_Fb: any light on in room n (glow on the floor plan).
Room_Lighting_Visible[1-100]	D To RoomNNN_Lighting_Visible: room n has lighting.
Room_Climate_Visible[1-100]	D To RoomNNN_Climate_Visible: room n has climate.
Room_Shades_Visible[1-100]	D To RoomNNN_Shades_Visible: room n has shades.



Manufacturer: World Wide Programming B.V.
Model: WWP Panel Rooms v1.0
Device Type: Software module - WWP Home Config

Room_TV_Visible[1-100]	D	To RoomNNN_TV_Visible: room n has a TV.
Room_Audio_Visible[1-100]	D	To RoomNNN_Audio_Visible: room n has audio.
Room_MediaPlayer_Visible[1-100]	D	To RoomNNN_MediaPlayer_Visible: room n has a media player.
Room_Fireplace_Visible[1-100]	D	To RoomNNN_Fireplace_Visible: room n has a fireplace.
Room_GarageDoor_Visible[1-100]	D	To RoomNNN_GarageDoor_Visible: room n has a garage door.
Building_Visible[1-3]	D	To RoomSelect.BuildingNN_Visible: building n is shown on this panel.
Routed_Room	A	Number of the room routed to this panel (0 = none).
Building_Default	A	To RoomSelect.Building_Default: building 1-3 the panel opens in.
Routed_Room_Name	S	Name of the routed room.
Room_Name[1-100]	S	To RoomSelect.RoomNNN_Name: room name from the configuration.
Building_Name[1-3]	S	To RoomSelect.BuildingNN_Name: building name from the configuration.

PARAMETERS:

Panel_Number	A	Panel number in the WWP config (panels[].nr). Default 1. Use the same number on every WWP Panel module of one touch panel.
--------------	---	--

TESTING: (please fill out carefully)

OPS USED FOR TESTING: RMC4 - firmware 2.8005.00031



Manufacturer: World Wide Programming B.V.
Model: WWP Panel Rooms v1.0
Device Type: Software module - WWP Home Config

SIMPL WINDOWS USED FOR TESTING:	4.3200.02.01
DEVICE DB USED FOR TESTING:	200.470.001.00
CRES DB USED FOR TESTING:	228.60.002.00
SYMBOL LIBRARY USED FOR TESTING:	1244
SAMPLE PROGRAM:	WWP Software-InterfaceDemo (touch panel: WWPIInterfaceDemo_v1.ch5z, contract WWPIInterfaceDemo.chd)
REVISION HISTORY:	v1.0 - initial release.