




Partner: Bose Model: ESP-88

**Device Type: Gain Interface v1.0** 



GENERAL INFORMATION		
SIMPLWINDOWS NAME:	Bose ESP Gain Interface v1.0	
CATEGORY:	Multi-Zone	
VERSION:	1.0	
SUMMARY:	This module controls a Gain object within the Bose ESP-88 configuration.	
GENERAL NOTES:	This module controls a Gain object within the Bose ESP-88 system. Please note that in the Bose configuration the Router name needs to be prefaced with an $\#$ " (such as $\#$ Gain1). This enables the Bose unit to send unsolicited real-time feedback to the Crestron unit when any changes are made.	
CRESTRON HARDWARE REQUIRED:	X-Series Processor, CNX-COM2, ST-COM, 2-Series Processor, C2COM3	
SETUP OF CRESTRON HARDWARE:	RS232 Baud: 38400 Parity: N Data Bits: 8 Stop Bits: 1	
VENDOR FIRMWARE:	None	
VENDOR SETUP:	None	
CABLE DIAGRAM:	CNSP-532	

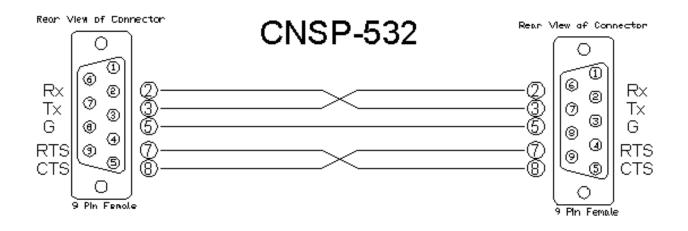





Partner: Bose Model: ESP-88

**Device Type: Gain Interface v1.0** 



CONTROL:		
Gain_Level_In	Α	Use to set gain level. Signed. Range from -32768 to +32767. Connect to slider definition.
Gain_Level_Up/Down	D	Press to increase or decrease gain level.
Gain_Mute_On/Off/Toggle	D	Pulse to turn gain mute on or off.
Gain_Enable	D	Latch high to enable serial communications with unit.
Gain_Read	D	Pulse to poll for current gain status.
From_Device	S	Serial signal to be routed from an RS-232C port

FEEDBACK:		
Gain_Level_Out	Α	Indicates the current gain level. Range from -32768 to +32767. Connect to slider definition.
Gain_Level_Out_Text	S	Text field indicating gain level. Range is from -60.0 to 12.0db.
Gain_Mute_ls_On/Off	D	Indicates the current gain mute status.
To_Device	S	Serial signal to be routed to an RS-232C port

PARAMETER:		
Step	Α	Use to set the volume up/down step increment.
Module Name	D	The name of the Gain module in the Bose ESP-88 configuration that this module will be communicating with. Note: The module name in the Bose configuration needs an "#" prefix, while the name entered in this module does not.





Partner: Bose Model: ESP-88

**Device Type: Gain Interface v1.0** 



TESTING:	
OPS USED FOR TESTING:	v3.155.1240
SIMPL WINDOWS USED FOR TESTING:	v2.10.32
DEVICE DB USED FOR TESTING:	20.03.013.00
CRES DB USED FOR TESTING:	20.01.008.00
SYMBOL LIBRARY USED FOR TESTING:	576
SAMPLE PROGRAM:	Bose ESP-88 Demo PRO2
REVISION HISTORY:	v1.0 – Initial Release