


Partner: Theta Digital
Model: Compli Universal Player
Device Type: DVD/CD Player



GENERAL INFORMATION

SIMPLWINDOWS NAME:	Theta Digital Compli Disk Player
CATEGORY:	DVD/CD Player
VERSION:	1.00
SUMMARY:	This module controls all of the features of the Theta Digital Compli Universal Disk Player.
GENERAL NOTES:	<p>This module controls all of the features of the Theta Digital Compli Universal Disk Player. It has a built in serial queue that does not block commands but rather spaces them out so that commands are sent slow enough to prevent the units sensitivity to high serial traffic.</p> <p>At the time of module development, the only feedback avail was for power only.</p>
CRESTRON HARDWARE REQUIRED:	C2I-COM, ST-COM, C2-COM-* or CNX-COM2
SETUP OF CRESTRON HARDWARE:	RS232 Baud: 19200 Parity: None Data Bits: 8 Stop Bits: 1
VENDOR FIRMWARE:	Unknown
VENDOR SETUP:	None
CABLE DIAGRAM:	CNSP-121

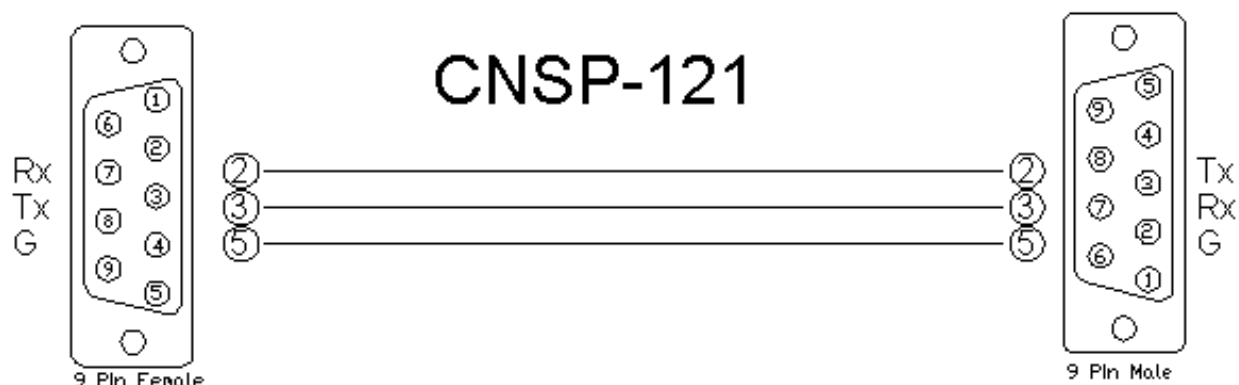

Partner: Theta Digital
Model: Compli Universal Player
Device Type: DVD/CD Player


CONTROL:

Power_*	D	Pulse to turn On/Off/Toggle Power status
Tray_Toggle	D	Pulse to Toggle the tray Open or Closed
Play, Stop, Pause, <<Scan, Scan>>, <<Skip, Skip>>, <<Step, Step>>	D	Pulse signals as needed to access the unit's transport functions
Key_*	D	Pulse to use the number features of the unit
Program	D	Pulse to enter Program mode
Repeat	D	Pulse to toggle through available repeat modes
Repeat_A-B	D	Pulse once to set A point, again to set B point, then the unit will repeat between the A and B point until the signal is pulsed again
Random	D	Pulse to toggle through Random modes
Clear	D	Pulse to Clear data input
Display	D	Pulse to Toggle through Display modes
Audio	D	Pulse to toggle through available Audio streams, or use navigation buttons
Subtitle	D	Pulse to toggle through available Subtitles, or use navigation buttons
Angle	D	Pulse to toggle through available Angles, or use navigation buttons
Video_Adjust	D	Pulse to enter Video Adjust mode
Surround	D	Pulse to toggle through available Surround modes
Top_Menu	D	Pulse to enter the Top Menu
DVD_Menu	D	Pulse to enter the DVD Menu – often the same as Top Menu
Setup_Menu	D	Pulse to enter the unit's Setup Menu – Some features are not available during playback
Arrow_*	D	Pulse to navigate around Menus and Modes
Enter	D	Pulse to select the currently highlighted menu/mode item

Partner: Theta Digital
Model: Compli Universal Player
Device Type: DVD/CD Player



Return	D	Pulse to Return to the previous Menu
Play_Mode	D	Pulse to go to the Play Mode screen feature
Poll_Power	D	While this signal is held high, the module will poll for power status every 5 seconds
From_Device\$	S	Serial signal to be tied to the receive signal of the Com driver

FEEDBACK:

Power_*_Fb	D	Feedback indicating the unit's Power Status.
To_Device\$	S	Serial signal to be routed to the TX side of the com port used to control the device

TESTING:

OPS USED FOR TESTING:	v3.137 (Release)
COMPILER USED FOR TESTING:	2.06.20
SAMPLE PROGRAM:	Theta Digital Compli Demo
REVISION HISTORY:	V. 1.0